

KUBOTA

- U.S.A. : **KUBOTA ENGINE AMERICA CORPORATION**
505 Schelter Road, Lincolnshire, Illinois 60069 U.S.A.
Telephone : (847)955-2500
- Canada : **KUBOTA CANADA LTD.**
5900 14th Avenue, Markham, Ontario, L3S 4K4, Canada
Telephone : (905)294-7477
- France : **KUBOTA EUROPE S.A.S**
19-25, Rue Jules Vercey, Z.I. BP88, 95101 Argenteuil Cedex, France
Telephone : (33)1-3426-3434
- Italy : **KUBOTA EUROPE S.A.S Italy Branch**
Via Grandi, 29 20068 Peschiera Borrome (MI) Italy
Telephone : (39)02-51650377
- Germany : **KUBOTA (DEUTSCHLAND) GmbH**
Senefelder Str. 3-5 63110 Rodgau /Nieder-Roden, Germany
Telephone : (49)6106-873-0
- U.K. : **KUBOTA (U.K.) LTD.**
Dormer Road, Thame, Oxfordshire, OX9 3UN, U.K.
Telephone : (44)1844-214500
- Australia : **KUBOTA AUSTRALIA PTY LTD.**
25-29 Permas Way, Truganina, VIC 3029, Australia
Telephone : (61)-3-9394-4400
- Malaysia : **KUBOTA MALAYSIA SDN. BHD.**
Lot 766, Jalan Subang 4, off Persiaran Subang Sungai Penaga Industrial Park,
47500 Subang Jaya
Telephone : (60)-3-7890-3533
- Philippines : **KUBOTA PHILIPPINES, INC.**
232 Quirino Highway, Baesa, Quezon City 1106, Philippines
Telephone : (63)2-422-3500
- Indonesia : **P.T. KUBOTA INDONESIA**
Taman Industri Bukit Semarang Baru(BSB) Blok D.1 Kav.8, Kel. Jatibarang-
Kec.Mijen, Semarang, Indonesia
Telephone : (62)-24-7472849
- Japan : **KUBOTA Corporation**
Engine Export Dept.
2-47, Shikitsuhigashi 1-chome, Naniwa-ku, Osaka, Japan 556-8601
Telephone : (81)6-6648-2155 Fax : (81)6-6648-3521

Code No. 1J778-8916-2



OPERATOR'S MANUAL KUBOTA DIESEL ENGINE

MANUEL DE L'OPERATEUR MOTEUR DIESEL DE KUBOTA


BEDIENUNGSANLEITUNG KUBOTA DIESEL MOTOR

MANUALE DELL'OPERATORE KUBOTA MOTORE DIESEL

MANUAL DE INSTRUCCIONES KUBOTA MOTOR DIESEL


V V D
3 2 1
3 4 8
0 0 0
7 3 3
C C C
R R R
T T T
E E E
4 4 4
V B V
3 G 2
3 V 4
0 2 0
7 2 3
T 0 C
T 7 R
I E C
E A R
4 V T
3 I E
8 4 V
0 2
0 4
T 0
T I E
E 4
B G

D1803-CR-TIE4
V2403-CR-TIE4
V2403-CR-TE4-BG
V2403-CR-TIE4-BG

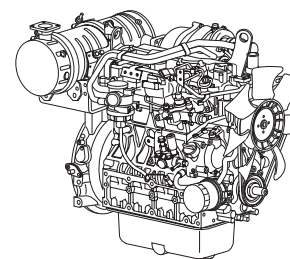


1ABACCJAP0070

V2607-CR-TIE4
V3307-CR-TIE4
V3307-TIE4A

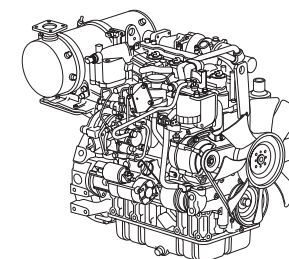

1ABAHABAP0070

V3800-TIE4

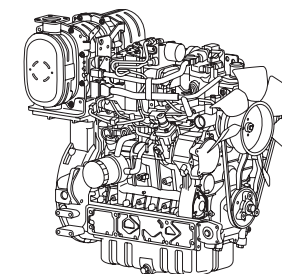

1ABADBMAP0230

READ AND SAVE THIS BOOK
MANUEL A LIRE ET A CONSERVER
DIESE ANLEITUNG BITTE SORGFÄLTIG DURCHLESEN
UND GRIFFBEREIT AUFBEWAHREN
LEGGETE E CONSERVATE QUESTO MANUALE
LEAN Y CONSERVEN ESTE MANUAL



California Proposition 65

 **WARNING** 

Engine exhaust, some of its constituents, certain vehicle components and fluids, contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

D1803-CR-TIE4/V2403-CR-TIE4
V2403-CR-TE4-BG/V2403-CR-TIE4-BG
V2607-CR-TIE4/V3307-CR-TIE4
V3307-TIE4A/V3800-TIE4
BC. B. 12 - 34. 15. K

OPERATOR'S MANUAL

KUBOTA DIESEL ENGINE

MODELS

D1803-CR-TIE4

V2403-CR-TIE4

V2403-CR-TE4-BG


V2403-CR-TIE4-BG

V2607-CR-TIE4


V3307-CR-TIE4

V3307-TIE4A


V3800-TIE4

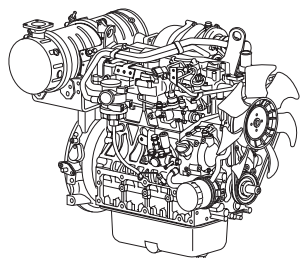

1ABACCJAP0070

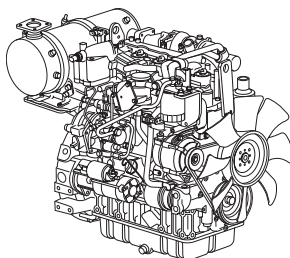

1ABAHABAP0070

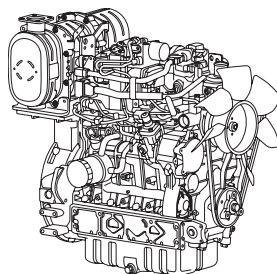

1ABADBMAP0230

READ AND SAVE THIS BOOK

Kubota

FOREWORD

You are now the proud owner of a KUBOTA Engine. This engine is a product of KUBOTA quality engineering and manufacturing. It is made of fine materials and under a rigid quality control system. It will give you long, satisfactory service. To obtain the best use of your engine, please read this manual carefully. It will help you become familiar with the operation of the engine and contains many helpful hints about engine maintenance. It is KUBOTA's policy to utilize as quickly as possible every advance in our research. The immediate use of new techniques in the manufacture of products may cause some small parts of this manual to be outdated. KUBOTA distributors and dealers will have the most up-to-date information. Please do not hesitate to consult with them.

This Operator's Manual should be considered a permanent part of the engine and should remain with the engine when it is resold.



SAFETY FIRST

This symbol, the industry's "Safety Alert Symbol", is used throughout this manual and on labels on the machine itself to warn of the possibility of personal injury. Read these instructions carefully. It is essential that you read the instructions and safety regulations before you attempt to assemble or use this unit.



DANGER : Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING : Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION : Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

IMPORTANT : Indicates that equipment or property damage could result if instructions are not followed.

NOTE : Gives helpful information.

CONTENTS

▲SAFE OPERATION	1
SERVICING THE ENGINE	1
NAMES OF PARTS	2
PRE-OPERATION CHECK	6
BREAK-IN.....	6
DAILY CHECK.....	6
OPERATING THE ENGINE	7
STARTING THE ENGINE (NORMAL).....	7
COLD WEATHER STARTING	8
STOPPING THE ENGINE	8
CHECKS DURING OPERATION	9
Radiator cooling water (Coolant).....	9
Oil pressure lamp	9
Charge lamp.....	9
Fuel	9
Color of exhaust	9
Immediately stop the engine if.....	9
AIR FLOW SENSOR	10
Air cleaner-mounted type	10
Inlet hose pipe-mounted type	10
PRECAUTIONS ON GENERATOR-EQUIPPED ENGINE	10
MAINTENANCE	11
SERVICE INTERVALS	12
RECOMMENDED OILS AND FUELS	16
Engine oil.....	16
Fuel	16
Biodiesel fuel (BDF)	16
Water separator.....	17
DAILY CHECKS	17
Checking engine oil level.....	17
Checking fuel level and refueling	18
Checking coolant level	19
Antifreeze	20
Checking fan belt.....	21
For the air cleaner with a dust cup (optional)	21
Dust indicator (optional)	21
REGULAR CHECKS AND MAINTENANCE WORK	22
EVERY 50 SERVICE HOURS.....	22
Checking fuel pipes and clamp bands.....	22
Draining water separator	23
EVERY 250 SERVICE HOURS.....	23
Cleaning air cleaner element.....	23
Adjusting fan belt tension	24
Checking intake air line	25
EVERY 250 HOURS OR 6 MONTHS	25
Checking radiator hoses and clamp bands	25
Precaution at overheating	25

EVERY 400 or 500 SERVICE HOURS	26
Changing engine oil.....	26
Replacing oil filter cartridge	26
EVERY 500 SERVICE HOURS.....	27
Replacing fuel filter cartridge.....	27
Replacing oil filter cartridge.....	27
Cleaning water separator (Type 1).....	27
Removing sediment in fuel tank	27
Cleaning fuel tank interior.....	27
Cleaning water jacket (radiator interior)	27
Replacing fan belt.....	27
EVERY 500 SERVICE HOURS OR 1 YEAR	28
Changing engine oil.....	28
Replacing water separator filter (Type 2)	28
EVERY 500 SERVICE HOURS OR 2 YEARS	28
Replacing fan belt.....	28
EVERY 1000 SERVICE HOURS.....	28
Checking valve clearance	28
EVERY 1500 SERVICE HOURS.....	29
Checking injector tip	29
Checking EGR cooler.....	29
Changing oil separator element	29
Checking Positive Crankcase Ventilation valve (PCV valve)	29
EVERY 3000 SERVICE HOURS.....	29
Checking turbo charger	29
Checking EGR System.....	29
ANNUAL SERVICING	30
Replacing air cleaner element.....	30
Checking EGR piping	30
Checking intake air line	30
Checking exhaust manifold for cracks or gas leak and for looseness or damage	30
BIENNIAL SERVICING	30
Replacing rubber piping related oil separator.....	30
Replacing intake air line and suction air pressure takeout rubber piping.....	30
Replacing boost sensor pressure rubber piping	30
Replacing EGR cooler rubber piping	30
Replacing EGR differential pressure sensor rubber piping	30
Replacing water rubber piping.....	30
Replacing lubricant rubber piping	30
Changing radiator coolant (L.L.C.)	30
Remedies for quick decrease of coolant	30
Replacing radiator hoses and clamp bands	31
Replacing fuel pipes and clamp bands.....	31
Replacing intake air line	31
SERVICE AS REQUIRED	31
Draining water separator (Type 2).....	31
CARRIAGE AND STORAGE	32
CARRIAGE	32
STORAGE	32
TROUBLESHOOTING	33
SPECIFICATIONS	35




SAFE OPERATION

Careful operation is your best assurance against an accident. Read and understand this section carefully before operating the engine. All operators, no matter how much experience they may have, should read this and other related manuals before operating the engine or any equipment attached to it. It is the owner's obligation to provide all operators with this information and instruct them on safe operation.

Observe the following for safe operation.

1. OBSERVE SAFETY INSTRUCTIONS

- Read and understand carefully this "OPERATOR'S MANUAL" and "LABELS ON THE ENGINE" before attempting to start and operate the engine.
- Learn how to operate and work safely. Know your equipment and its limitations. Always keep the engine in good condition.
- Before allowing other people to use your engine, explain how to operate and have them read this manual before operation.
- DO NOT modify the engine. UNAUTHORIZED MODIFICATIONS to the engine may impair the function and/or safety and affect engine life. If the engine does not perform properly, consult your local Kubota Engine Distributor first.

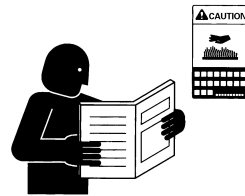

1AAACAAAP008B

2. WEAR SAFE CLOTHING AND PERSONAL PROTECTIVE EQUIPMENT (PPE)

- DO NOT wear loose, torn or bulky clothing around the machine that may catch on working controls and projections or into fans, pulleys and other moving parts causing personal injury.
- Use additional safety items-PPE, e.g. hard hat, safety protection, safety goggles, gloves, etc., as appropriate or required.
- DO NOT operate the machine or any equipment attached to it while under the influence of alcohol, medication, or other drugs, or while fatigued.
- DO NOT wear radio or music headphones while operating the engine.



1AEAAAAAP0130

3. CHECK BEFORE STARTING AND OPERATING THE ENGINE

- Inspect the engine before operation. Do not operate the engine if there is something wrong with it. Repair it immediately.
- Ensure all guards and shields are in place before operating the engine. Replace any that are damaged or missing.
- Check to see that you and others are a safe distance from the engine before starting.
- Always keep the engine at least 3 feet (1 meter) away from buildings and other facilities.
- DO NOT allow children or livestock to approach the machine while the engine is running.
- DO NOT start the engine by shorting across starter terminals. The machine may start in gear and move. Do not bypass or defeat any safety devices.



1BAABADAP0010

4. KEEP THE ENGINE AND SURROUNDINGS CLEAN

- Stop the engine before cleaning.
- Keep the engine clean and free of accumulated dirt, grease and trash to avoid a fire. Store flammable fluids in proper containers and cabinets away from sparks and heat.
- Check for and repair leaks immediately.
- DO NOT stop the engine without idling; Allow the engine to cool down, first. Keep the engine idling for about 5 minutes before stopping unless there is a safety problem that requires immediate shut down.



1AEAAAAAP0120

5. SAFE HANDLING OF FUEL AND LUBRICANTS -KEEP AWAY FROM FIRE

- Always stop the engine before refueling and/or lubricating.
- DO NOT smoke or allow flames or sparks in your work area. Fuel is extremely flammable and explosive under certain conditions.
- Refuel at a well ventilated and open place. When fuel and/or lubricants are spilled, refuel after letting the engine cool down.
- DO NOT mix gasoline or alcohol with diesel fuel. The mixture can cause a fire or severe engine damage.
- Do not use unapproved containers e.g. buckets, bottles, jars. Use approved fuel storage containers and dispensers.



1AAACAAAP001A


6. EXHAUST GASES AND FIRE PREVENTION

- Engine exhaust fumes can be very harmful if allowed to accumulate. Run the engine in a well ventilated location and where there are no people or livestock near the engine.
- The exhaust gas from the muffler is very hot. To prevent a fire, do not expose dry grass, mowed grass, oil or any other combustible materials to exhaust gas. Keep the engine and muffler clean at all times.
- To avoid a fire, be alert for leaks of flammable substances from hoses and lines. Check for leaks from hoses or pipes, such as fuel and hydraulic fluid by following the maintenance check list.
- To avoid a fire, do not short across power cables and wires. Check to see that all power cables and wirings are in good condition. Keep all electrical connections clean. Bare wire or frayed insulation can cause a dangerous electrical shock and personal injury.
- Make sure there is nothing flammable around muffler.
- Do not touch the muffler nor get yourself directly exposed to exhaust gases. You may get burnt.
- Inspect the exhaust system daily for any signs of leakage. Check for broken pipes and muffler and also for loose or missing bolts, nuts and clamps. If any exhaust leaks or fractured parts are found, repairs must be completed prior to operation.



7. ESCAPING FLUID

- Relieve all pressure in the air, the oil and the cooling systems before disconnecting any lines, fittings or related items.
- Relieve all pressure in any system before disconnecting any lines, fittings, or related items.
DO NOT check for pressure leaks with your hand. High pressure oil or fuel can cause personal injury.
- Escaping fluid under pressure has sufficient force to penetrate skin causing serious personal injury.
- Fluid escaping from pinholes may be invisible. Use a piece of cardboard or wood to search for suspected leaks: do not use hands and body. Use safety goggles or other eye protection when checking for leaks.
- If injured by escaping fluid, see a medical doctor immediately. This fluid can produce gangrene or severe allergic reaction.

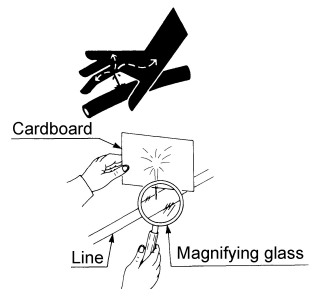

1ABAAAAAP120F

8. CAUTIONS AGAINST BURNS AND BATTERY EXPLOSION


- To avoid burns, be cautious of hot components, e.g. muffler, exhaust piping, turbo charger, EGR system, radiator, hoses, engine body, coolants, engine oil, etc. during operation and after the engine has been shut off.
- DO NOT remove the radiator cap while the engine is running or immediately after stopping. Otherwise hot coolant will spout out from the radiator. Wait until the radiator is completely cool to the touch before removing the cap. Wear safety goggles.
- Close the coolant drain plugs, secure the pressure cap, and fasten the pipe bands before operating. If these parts are taken off, or loosened, it will result in serious personal injury.
- The battery presents an explosive hazard. When the battery is being charged, hydrogen and oxygen gases are extremely explosive.
- DO NOT use or charge the battery if its fluid level is below the LOWER mark.

Otherwise, the component parts may deteriorate earlier than expected, which may shorten the service life or cause an explosion. Immediately, add distilled water until the fluid level is between the UPPER and LOWER marks.

- Keep sparks and open flames away from the battery, especially during charging. DO NOT strike a match near the battery.
- DO NOT check the battery charge by placing a metal object across the terminals. Use a voltmeter or hydrometer.
- DO NOT charge a frozen battery. There is a risk of explosion. When frozen, warm the battery up to at least 16°C (61°F).



1AEABAAAP0080

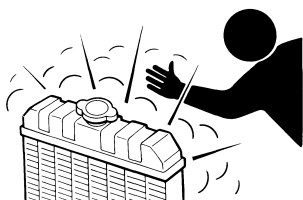

1AAAAABAP0230



1ARAEAAAP0520

9. KEEP HANDS AND BODY AWAY FROM ROTATING PARTS


- Stop the engine before checking or adjusting the belt tension and cooling fan.
- Keep your hands and body away from rotating parts, such as the cooling fan, V-belt, fan drive pulley or flywheel. Contact with rotating parts can cause severe personal injury.
- DO NOT run the engine without safety guards. Install safety guards securely before operation.




1ABAAAAAP1470

10. ANTIFREEZE AND DISPOSAL OF FLUIDS

- Antifreeze is poisonous. If it is swallowed, seek immediate medical help. Do NOT make a person throw up unless told to do so by poison control or a health care professional. Use standard first aid and CPR for signs of shock or cardiac arrest. Call your local Poison Control Center or your local emergency number for further assistance.
- Wear rubber gloves to avoid personal injury, when you treat antifreeze. In case of contact with skin, wash it off immediately.
- DO NOT mix different types of antifreeze. The mixture can produce a chemical reaction causing harmful substances. Use approved or genuine KUBOTA antifreeze.
- Be mindful of the environment and the ecology. Before draining any fluids, determine the correct way to dispose of them. Observe the relevant environmental protection regulations when disposing of oil, fuel, coolant, brake fluid, filters and batteries.
- When draining fluids from the engine, place a suitable container underneath the engine body.
- DO NOT pour waste onto the ground, down a drain, or into any water source. Dispose of waste fluids according to environmental regulations.

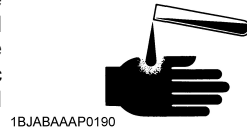


1BJABAAAP0190

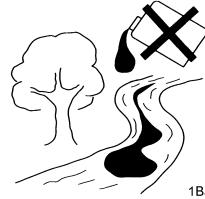

1BJABAAAP0180

11. CONDUCTING SAFETY CHECKS AND MAINTENANCE

 
- When inspecting the engine or servicing, place the engine on a large flat surface. DO NOT work on anything that is supported ONLY by lift jacks or a hoist. Always use blocks or the correct stands to support the engine before servicing.
- Disconnect the battery from the engine before conducting service. Put a "DO NOT OPERATE!" tag on the starter switch to avoid accidental starting.
- To avoid sparks from an accidental short circuit always disconnect the battery's ground cable (-) first and reconnect it last.
- Stop the engine and remove the key when conducting daily and periodic maintenance, service and cleaning.
- Check or conduct maintenance after the engine, coolant, muffler, or muffler cover have cooled off completely.
- Always use the appropriate tools and fixtures. Verify that they are in good condition before performing any service work. Make sure you understand how to use them before service.
- Use ONLY correct engine barring techniques for manually rotating the engine. DO NOT attempt to rotate the engine by pulling or prying on the cooling fan and V-belt. This practice can cause serious personal injury or premature damage to the cooling fan and belt.



1BJABAAAP0200

- Replace fuel pipes and lubricant pipes with their hose clamps every 2 years or earlier whether they are damaged or not. They are made of rubber and age gradually.
- Keep a first aid kit and appropriate type fire extinguisher handy at all times.

12. SAFETY LABELS

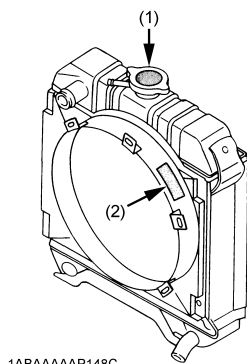

(1) The following label is just an example. A different label might be applied on the actual machine.



(2) Part No.TA040-4957-1
Do not get your hands close to engine fan and fan belt.



13. CARE OF SAFETY LABELS

1. Keep safety labels clean and free from obstructing material.
2. Clean safety labels with soap and water, dry with a soft cloth.
3. Replace damaged or missing safety labels with new labels from your local KUBOTA Dealer.
4. If a component with safety label(s) affixed is replaced with a new part, make sure the new label(s) is (are) attached in the same location(s) as the replaced component.
5. Mount new safety labels by applying to a clean dry surface and pressing any bubbles to the outside edge.

SERVICING THE ENGINE

Your dealer has knowledge of your new engine and has the desire to help you get the most value from it. After reading this manual thoroughly, you will find that you can do some of the regular maintenance yourself.

However, when in need of parts or major service, see your KUBOTA Dealer.


For service, contact the KUBOTA Dealership from which you purchased your engine or your local KUBOTA Dealer.

When in need of parts, be prepared to give your dealer the engine serial number.

Locate the serial number now and record them in the space provided.


	Type	Serial No.
Engine		
Date of Purchase		
Name of Dealer		
(To be filled in by purchaser)		

[D1803-CR-TIE4, V2403-CR-TIE4, V2403-CR-TE4-BG, V2403-CR-TIE4-BG]

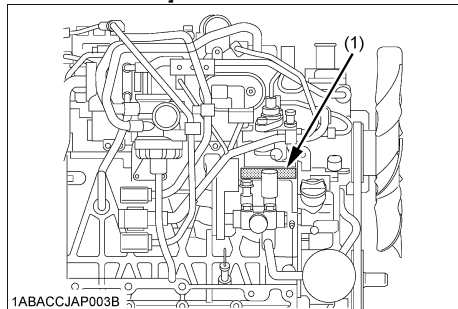


(1) Engine serial number

[V2607-CR-TIE4, V3307-CR-TIE4]

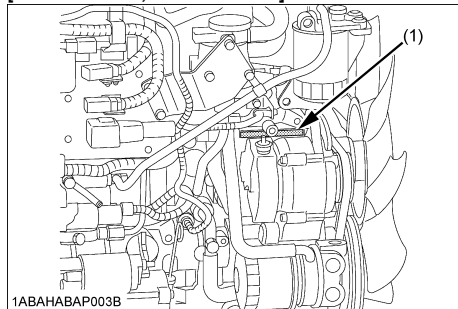


(1) Engine serial number

[V3307-TIE4A]

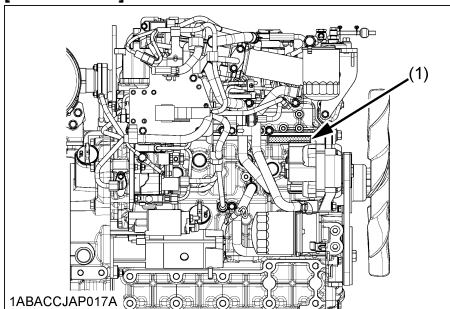

(1) Engine serial number


[V3800-TIE4]

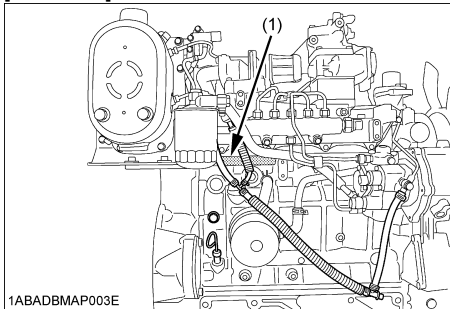


(1) Engine serial number

NAMES OF PARTS

[D1803-CR-TIE4, V2403-CR-TIE4, V2403-CR-TE4-BG, V2403-CR-TIE4-BG]

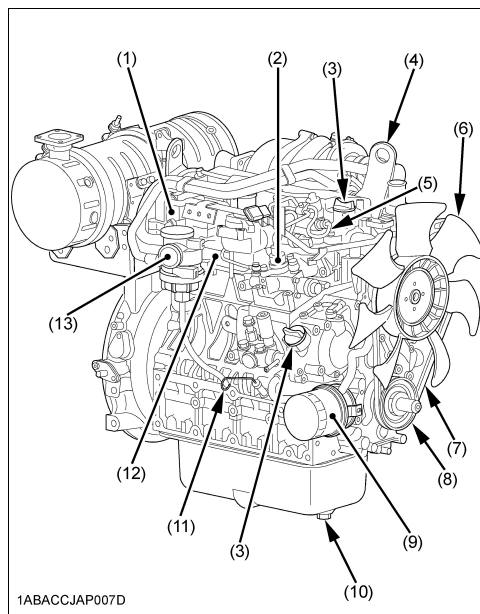

- (1) EGR valve
- (2) Supply pump
- (3) Oil filler plug
- (4) Engine hook
- (5) Rail
- (6) Cooling fan
- (7) Fan belt
- (8) Fan drive pulley
- (9) Oil filter cartridge
- (10) Oil drain plug
- (11) Oil level gauge
- (12) Intake manifold
- (13) Oil separator


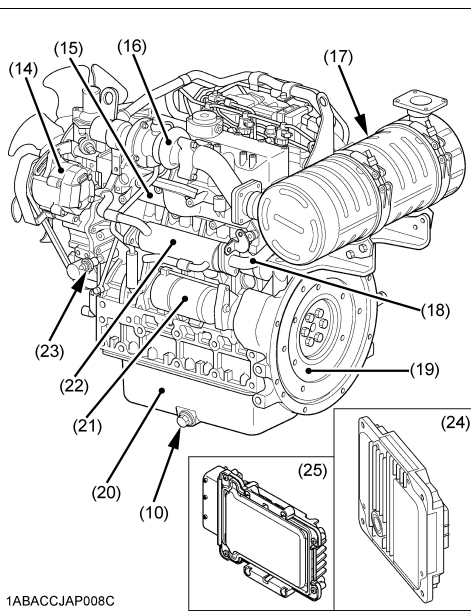


- (14) Alternator
- (15) Exhaust manifold
- (16) Turbo charger
- (17) Diesel Oxidation Catalyst (DOC)
- (18) EGR pipe
- (19) Flywheel
- (20) Oil pan
- (21) Starter
- (22) EGR cooler
- (23) Oil pressure switch
- (24)(25) Engine Control Unit (ECU), use either.

NOTE :

- (24)(25) Engine Control Unit (ECU) is not connected to the engine in the figure above.

[V2607-CR-TIE4, V3307-CR-TIE4]

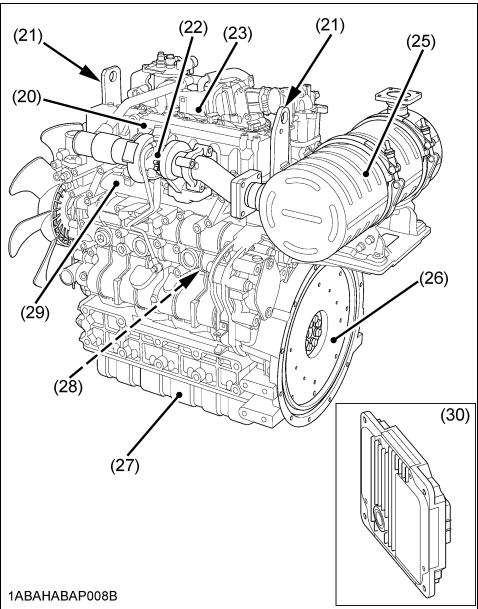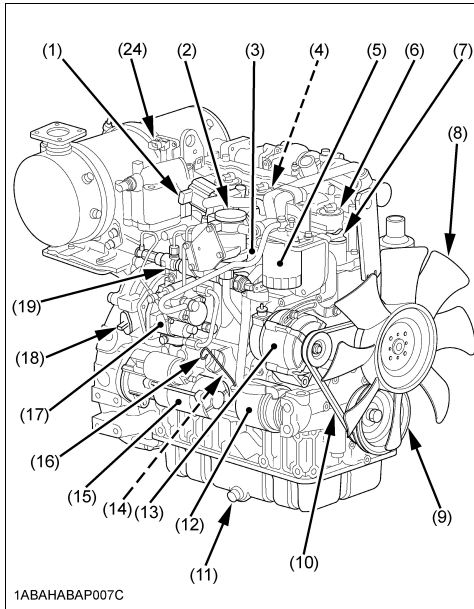


- (1) EGR valve
- (2) Oil separator
- (3) Intake manifold
- (4) Glow plug
- (5) Fuel filter cartridge
- (6) Injector
- (7) Oil filler plug
- (8) Cooling fan
- (9) Fan drive pulley
- (10) Fan belt
- (11) Oil drain plug
- (12) Oil filter cartridge
- (13) Alternator
- (14) Oil pressure switch
- (15) Starter

- (16) Oil level gauge
- (17) Supply pump
- (18) NE sensor
- (19) Rail
- (20) Head cover
- (21) Engine hook
- (22) Turbo charger
- (23) EGR cooler
- (24) Boost sensor
- (25) Diesel Oxidation Catalyst (DOC)
- (26) Flywheel
- (27) Oil pan
- (28) G sensor
- (29) Exhaust manifold
- (30) Engine Control Unit (ECU)


NOTE :

- (30) Engine Control Unit (ECU) is not connected to the engine in the figure above.

[V3307-TIE4A]

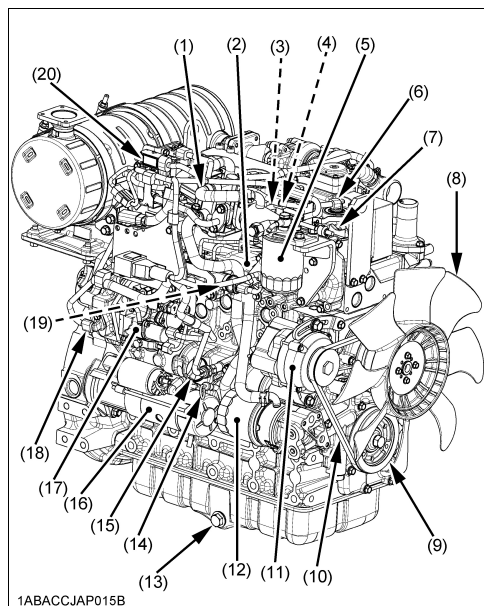

- (1) EGR valve
- (2) Intake manifold
- (3) Glow plug
- (4) Temperature sensor
- (5) Fuel filter cartridge
- (6) Injector
- (7) Oil filler plug
- (8) Cooling fan
- (9) Fan drive pulley
- (10) Fan belt
- (11) Alternator
- (12) Oil filter cartridge
- (13) Oil drain plug
- (14) Oil level gauge
- (15) Oil pressure switch
- (16) Starter

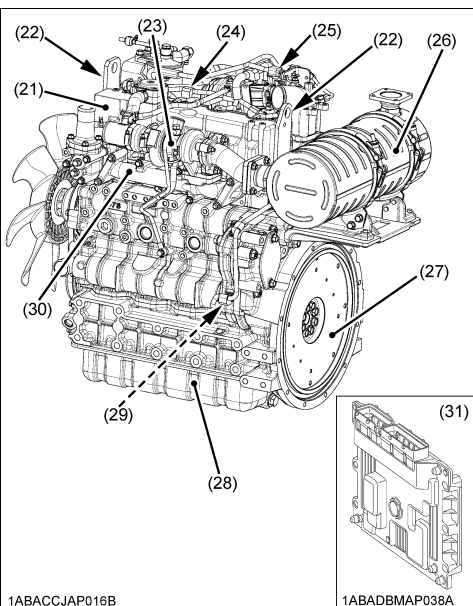


- (17) Supply pump
- (18) NE sensor
- (19) Rail
- (20) Differential pressure sensor (AFM)
- (21) Head cover
- (22) Engine hook
- (23) Turbo charger
- (24) EGR cooler
- (25) Boost sensor
- (26) Diesel Oxidation Catalyst (DOC)
- (27) Flywheel
- (28) Oil pan
- (29) G sensor
- (30) Exhaust manifold
- (31) Engine Control Unit (ECU)

NOTE :

- (31) Engine Control Unit (ECU) is not connected to the engine in the figure above.

[V3800-TIE4]

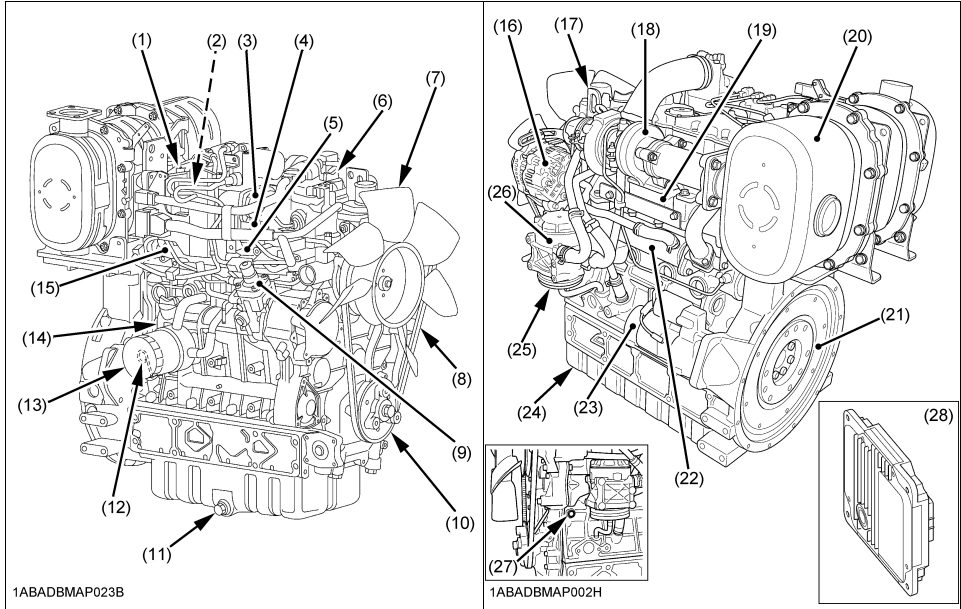

- (1) EGR pipe
- (2) EGR valve
- (3) Intake air throttle
- (4) Intake air heater
- (5) Intake manifold
- (6) Oil filler plug
- (7) Cooling fan
- (8) Fan belt
- (9) Supply pump
- (10) Fan drive pulley
- (11) Oil drain plug
- (12) Oil level gauge
- (13) Oil filter cartridge
- (14) Coolant drain plug
- (15) Rail

- (16) Alternator
- (17) Engine hook
- (18) Turbo charger
- (19) Exhaust manifold
- (20) Diesel Oxidation Catalyst (DOC)
- (21) Flywheel
- (22) EGR cooler
- (23) Starter
- (24) Oil pan
- (25) Positive Crankcase Ventilation valve (PCV valve)
- (26) Oil separator
- (27) Oil pressure switch
- (28) Engine Control Unit (ECU)

NOTE :

- (28) Engine Control Unit (ECU) is not connected to the engine in the figure above.

PRE-OPERATION CHECK

BREAK-IN

During the engine break-in period, observe the following by all means:

1. Change engine oil and oil filter cartridge after the first 50 hours of operation. (See "Changing engine oil" and "Replacing oil filter cartridge" in "EVERY 400 or 500 SERVICE HOURS" (D1803-CR-TIE4, V2403-CR-TIE4) or "EVERY 500 SERVICE HOURS" and "EVERY 500 SERVICE HOURS OR 1 YEAR" (V2607-CR-TIE4, V3307-CR-TIE4, V3307-TIE4A, V3800-TIE4) in "REGULAR CHECKS AND MAINTENANCE WORK" section.)
2. When ambient temperature is low, operate the machine after the engine has been completely warmed up.

DAILY CHECK

To prevent trouble from occurring, it is important to know the conditions of the engine well. Check it before starting.



WARNING

To avoid personal injury or death:

- Install shields and safeguards attached to the engine when operating.
- Stop the engine at a flat and wide space when checking.
- Keep dust or fuel away from the battery, wiring, muffler and engine to prevent a fire. Check and clear them before operating every day. Pay attention to the heat of the exhaust pipes or exhaust gas so that it can-not ignite trash.

Item		Ref. page
1. Parts which had trouble in previous operation		-
2. By walking around the machine	(1) Oil or cooling water (coolant) leaks	25
	(2) Engine oil level and contamination	17
	(3) Amount of fuel	18
	(4) Amount of coolant	16 to 20
	(5) Dust in air cleaner dust cup	23
	(6) Damaged parts and loosened bolts and nuts	-
3. By inserting the key into the starter switch	(1) Proper functions of meters and pilot lamps; no stains on these parts	-
4. By starting the engine	(1) Color of exhaust fumes	9
	(2) Unusual engine noise	9
	(3) Engine start-up condition	8
	(4) Slow-down and acceleration behavior	9

OPERATING THE ENGINE

STARTING THE ENGINE (NORMAL)



WARNING

To avoid personal injury or death:


- Do not allow children to approach the machine while the engine is running.
- Install the machine on which the engine is installed, on a flat place.
- Do not run the engine on gradients.
- Do not run the engine in an enclosed area. Exhaust gas can cause air pollution and exhaust gas poisoning.
- Keep your hands away from rotating parts (such as fan, pulley, belt, flywheel etc.) during operation.
- Do not operate the machine while under the influence of alcohol or drugs.
- Do not wear loose, torn or bulky clothing around the machine. It may catch on moving parts or controls, leading to the risk of accident. Use additional safety items, e.g. hard hat, safety boots or shoes, eye and hearing protection, gloves, etc., as appropriate or required.
- Do not wear radio or music headphones while operating engine.
- Check to see if it is safe around the engine before starting.
- Reinstall safeguards and shields securely and clear all maintenance tools when starting the engine after maintenance.

IMPORTANT :

- Do not use ether or any starting fluid for starting the engine, or a severe damage will occur.
- When starting the engine after a long storage (of more than 3 months), activate the starter for about 10 seconds to allow oil to reach every engine part.

1. Set the fuel shutoff-valve to the "ON" (OPEN) position.
2. Insert the key into the starter switch.

3. Turn the key to the "ON" position and hold it until the heater indicator turns off.

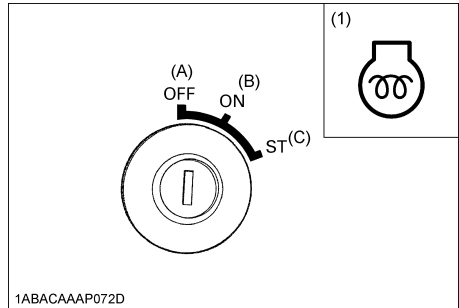

(1) Heater indicator

(A) "OFF" SWITCHED OFF
(B) "ON" OPERATION
(C) "ST" STARTING

4. Turn the key to the "STARTING" position and the engine should start. Release the key immediately when the engine starts.
5. Check to see that the oil pressure lamp and charge lamp are off. If the lamps are still on, immediately stop the engine, and determine the cause. (See "CHECKS DURING OPERATION" in "OPERATING THE ENGINE" section.)

NOTE :

- If the oil pressure lamp stays on after the engine starts and runs, shut the engine off immediately and check the following:
 - if there is enough engine oil.
 - if the engine oil has dirt in it.
 - if the wiring is faulty.
 If the oil pressure lamp continues to stay on and is not resolved by checking these items, contact your local KUBOTA Dealer for service.

6. Warm up the engine at medium speed without load.

IMPORTANT :

- If the engine does not catch or start at 10 seconds after the starter switch is set at "STARTING" position, wait for another 30 seconds and then begin the engine starting sequence again. Do not allow the starter motor to run continuously for more than 20 seconds.

COLD WEATHER STARTING

If the ambient temperature is below -5°C (23°F) and the engine is very cold, start it in the following manner:

1. Set the fuel valve to the "ON" (OPEN) position.
2. Insert the key into the starter switch.
3. Turn the key to the "ON" position and hold it until the heater indicator turns off.

Heater indicator comes on when the key is turned to the "ON" position and engine coolant temperature is below 0°C (32°F), and goes off automatically when preheat is completed.

4. Turn the key to the "STARTING" position and the engine should start.
(If the engine fails to start after 10 seconds, turn off the key for 30 seconds. Then repeat steps "3" and "4".

IMPORTANT :

- Do not allow the starter motor to run continuously for more than 20 seconds.
- Always warm up the engine, not only in winter, but also in warmer seasons. An insufficiently warmed-up engine can shorten its service life.
- When the ambient temperature is expected to be below -15°C (5°F), remove the battery from the machine and move it to a warmer or heated and safe indoor location. Reinstall the battery in the machine just prior to the next machine usage. Do not store the battery in living areas. Please observe Cautions under section 8. in "SAFE OPERATION" of this manual when working on or handling the battery or personal injury and property damage may occur.
- When the engine coolant temperature is below 0°C (32°F), the engine speed becomes temporarily restricted. This is to protect the engine component parts, especially turbo charger.
- A specific time later, the restrictive system gets automatically released in stages.
- Basically the models are standard equipped with this function. Some engine models are not equipped with this, however.

STOPPING THE ENGINE



WARNING

To avoid personal injury or death:

- To stop the engine, always use the starter switch.

When shutting off the battery power directly with the battery switch or the like, first stop the engine with the starter switch and then make sure the ECU comes to a complete stop. Otherwise a trouble or malfunction may be caused.

- Since operation data needs to be stored in the ECU after key off, wait more than 5 minutes when shutting off the battery power directly.

1. Run the engine under idling conditions.

IMPORTANT :

- Allow the engine to idle for 5 minutes before shutting it off after a full load operation.
Failure to do so may lead to turbo charger trouble.

2. The engine should stop with the starter switch placed at the "OFF" position.
3. After stopping the engine, remove the key.

CHECKS DURING OPERATION

While running, make the following checks to see that all parts are working correctly.

■ Radiator cooling water (Coolant)



WARNING

To avoid personal injury or death:

- Do not remove the radiator cap until coolant temperature is well below its boiling point. Then loosen the cap slightly to the stop position, to relieve any pressure, before removing the cap completely.

◆ Precaution at overheating

The event that the coolant temperature is nearly or more than the boiling point is called "OVERHEATING".

While running, make the following checks to see that all parts are working correctly. **If anything is unusual, inspect it, referring to the relevant description in "MAINTENANCE" and "REGULAR CHECKS AND MAINTENANCE WORK" section.**

If the coolant temperature warning lamp lights up or if steam or coolant does not stop squirting from the radiator overflow pipe, turn off the load and **keep the engine idling (COOLING-DOWN) for at least 5 minutes** to let it cool down gradually. Then stop the engine and take the following inspections and servicing.

1. Check to see if the coolant runs short or if there is any coolant leak.
2. Check to see if there is any obstacle around the cooling air inlet or outlet.
3. Check to see if there is any dirt or dust between the radiator fins and tubes.
4. Check to see if the fan belt is too loose; and check to see if any one of the radiator water pipe is clogged.

■ Oil pressure lamp

The lamp lights up to warn the operator that the engine oil pressure has dropped below the prescribed level. If this should happen during operation or should not go off even after the engine is accelerated more than 1000rpm, immediately stop the engine and check the following:

1. Engine oil level (See "Checking engine oil level" in "DAILY CHECKS" in "MAINTENANCE" section.)

■ Charge lamp

The charge lamp lights up to warn the operator the battery charge is low during running or there is no alternator output during running. It is normal to have the charge lamp on when the key is on and engine is not running.

If the charge lamp is on during running, check the following:

1. Cable broken
2. Poor connection at alternator terminal
3. Fan belt too loose or damaged

■ Fuel



WARNING

To avoid personal injury or death:

- Fluid escaping from pinholes may be invisible. Do not use hands to search for suspected leaks; Use a piece of cardboard or wood, instead. If injured by escaping fluid, see a medical doctor at once. This fluid can produce gangrene or a severe allergic reaction.
- Check any leaks from the fuel pipes. Use eye, face and hand protection such as gloves and any necessary appropriate additional personal protective equipment and clothing.

Do not run the fuel tank level too low or completely out of fuel. You may experience improper engine running and/or a DTC (Diagnostic Trouble Code) error code may be recorded in the Engine Control. Additionally, fuel system bleeding may be necessary if air enters the fuel system. (See "Checking fuel level and refueling" in "DAILY CHECKS" in "MAINTENANCE" section.)

■ Color of exhaust

White exhaust may come out. In most cases this is caused by water vapor and not a problem. Such exhaust disappears when the temperature rises up as specified.

■ Immediately stop the engine if;

- The engine suddenly slows down or accelerates.
- Unusual noises are suddenly heard.
- Exhaust fumes suddenly become very dark.
- The oil pressure lamp lights up.
- The engine warning lamp lights up.
- Continuous large or abnormal quantities of white smoke.

AIR FLOW SENSOR

■ Air cleaner-mounted type

- Do not use any other air cleaner and element than specified. Unspecified ones cause the air flow sensor to malfunction and to lose its full performance.

■ Inlet hose pipe-mounted type

- Be careful not to install the air flow sensor on the pipe in the wrong direction.
- Do not change the direction and insertion angle of the hoses before and after the pipe. Wrong direction causes the air flow sensor to malfunction and to lose its full performance.

PRECAUTIONS ON GENERATOR-EQUIPPED ENGINE



WARNING

To avoid personal injury or death:

If the engine is kept running under no load or light load (load factor below 30%), unburnt fuel or carbon builds up in the exhaust system. As a result, the engine may get damaged or cause a fire.

Run the engine under enough load at regular intervals to remove unburnt fuel and carbon deposits.

- Before doing the load operation, make sure there is nothing flammable around the engine.
- Do not put a load all at once on the engine, but gradually.
- If by any chance, spark rises out of the muffler outlet, DO NOT GET THE ENGINE UNLOADED, BUT INTERRUPT IT IMMEDIATELY.

MAINTENANCE

IMPORTANT:


- A repair shop or person of the owner's choosing may maintain, replace, or repair emission-control devices and systems. However, warranty service must be performed by an authorized KUBOTA service facility except in the case of emergency.




WARNING

To avoid personal injury or death:

- Conduct daily checks, periodic maintenance, refueling or cleaning on a level surface with the engine shut off and remove the key.
- Before allowing other people to use your engine, explain how to operate, and have them read this manual before operation.
- When cleaning any parts, do not use gasoline but use regular cleanser.
- Always use proper tools, that are in good condition. Make sure you understand how to use them, before performing any service work.
- When installing, tighten all bolts lest they should be loose. Tighten the bolts by the specified torque.
- Do not put any tools on the battery, or battery terminals may short out. Severe burns or fire could result. Detach the battery from the engine before maintenance.
- Do not touch muffler or exhaust pipes while they are hot; Severe burns could result.

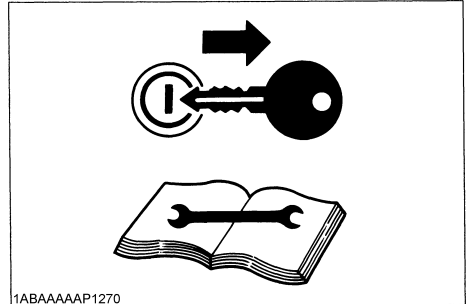

1ABAAAAAP1270

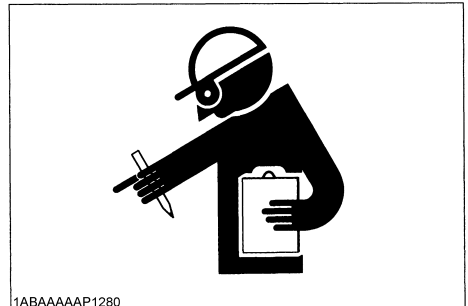

1ABAAAAAP1280

SERVICE INTERVALS

[D1803-CR-TIE4, V2403-CR-TIE4, V2403-CR-TE4-BG, V2403-CR-TIE4-BG]

Observe the following for service and maintenance.

Interval	Item	Ref. page		
Daily	Checking engine oil level	17		
	Checking fuel level and refueling	18		
	Checking coolant level	16		
	Checking fan belt	21		
Initial 50 hours	Changing engine oil	26		
	Replacing oil filter cartridge	26		
Every 50 hours	Checking fuel pipes and clamp bands	22		
	Draining water separator	23		
Every 250 hours	Cleaning air cleaner element	23	*1	
	Adjusting fan belt tension	24		
	Checking intake air line	25		
Every 250 hours or 6 months	Checking radiator hoses and clamp bands	25		
Every 400 hours or 500 hours	Changing engine oil	26	*3	
	Replacing oil filter cartridge	26	*3	
Every 500 hours	Replacing fuel filter cartridge	27	*5	
	Cleaning water separator (Type 1)	27		
	Removing sediment in fuel tank	27	*3	
	Cleaning water jacket (radiator interior)	27	*3	
	Replacing fan belt	27	*3	
Every 500 hours or 1 year	Replacing water separator filter (Type 2)	28	*3	
Every 1000 hours	Checking valve clearance	28	*3	
Every 1500 hours	Checking injector tip	29	*3	@
	Checking EGR cooler	29	*3	@
	Changing oil separator element	29	*4	@
	Checking PCV valve	29	*3 *4	@
Every 3000 hours	Checking turbo charger	29	*3	@
	Checking EGR system	29	*3	@

Interval	Item	Ref. page		
Every year	Replacing air cleaner element	29	*3	
	Checking EGR piping	30	*3	
	Checking intake air line	30		
	Checking exhaust manifold for cracks or gas leak and for looseness or damage	30		
Every 2 years	Replacing rubber piping related to oil separator	30	*3 *4	
	Replacing intake air line and suction air pressure takeout rubber piping	30	*3	
	Replacing EGR cooler rubber piping	30	*3	
	Replacing water rubber piping	30	*3	
	Replacing lubricant rubber piping	30	*3	
	Changing radiator coolant (L.L.C.)	30		
	Replacing radiator hoses and clamp bands	31	*3	
	Replacing fuel pipes and clamp bands	31	*3 *5	
	Replacing intake air line	31	*3	

IMPORTANT :

*1 Air cleaner should be cleaned more often in dusty conditions than in normal conditions.

*2 After 6 times of cleaning.

*3 Consult your local KUBOTA Dealer for this service.

*4 If equipped with the oil separator.

*5 When using biodiesel fuel, replace the fuel filter cartridge, fuel hoses and clamp bands with new ones at half intervals.

- The items listed above (@ marked) are registered as emission related critical parts by KUBOTA in the U.S. EPA nonroad emissions regulations. As the engine owner, you are responsible for the performance of the required maintenance on the engine according to the above instructions.

Please see the Warranty Statement in detail.

- The items listed above other than @ marked are not necessary to keep the emission related warranty valid.
- Failure to perform the maintenance will cause problems that will significantly degrade the engine performance.

[V2607-CR-TIE4, V3307-CR-TIE4, V3307-TIE4A, V3800-TIE4]

Observe the following for service and maintenance.

Interval	Item	Ref. page		
Daily	Checking engine oil level	17		
	Checking fuel level and refueling	18		
	Checking coolant level	16		
	Checking fan belt	21		
Initial 50 hours	Changing engine oil	28		
	Replacing oil filter cartridge	27		
Every 50 hours	Checking fuel pipes and clamp bands	22		
	Draining water separator	23		
Every 250 hours	Cleaning air cleaner element	23	*1	
	Adjusting fan belt tension	24		
	Checking intake air line	25		
Every 250 hours or 6 months	Checking radiator hoses and clamp bands	25		
Every 500 hours	Replacing oil filter cartridge	27		
	Replacing fuel filter cartridge	27	*4	
	Cleaning water separator (Type1)	27		
	Removing sediment in fuel tank	27		
	Cleaning fuel tank interior	27	*3	
	Cleaning water jacket (radiator interior)	27	*3	
Every 500 hours or 1 year	Changing engine oil	28	*3	
	Replacing water separator filter (Type 2)	28	*3	
Every 500 hours or 2 years	Replacing fan belt	28	*3	
Every 1000 hours	Checking valve clearance	28	*3	
Every 1500 hours	Checking injector tip	29	*3	@
	Checking EGR cooler	29	*3	@
	Changing oil separator element	29		@
	Checking PCV valve	29	*3	@
Every 3000 hours	Checking turbo charger	29	*3	@
	Checking EGR system	29	*3	@

Interval	Item	Ref. page		
Every year	Replacing air cleaner element	30	*2 *3	
	Checking EGR piping	30	*3	
	Checking intake air line	30		
	Checking exhaust manifold for cracks or gas leak and for looseness or damage	30		
Every 2 years	Replacing rubber piping related to oil separator	30	*3	
	Replacing intake air line and suction air pressure takeout rubber piping	30	*3	
	Replacing boost sensor pressure rubber piping	30	*3	
	Replacing EGR cooler rubber piping	30	*3	
	Replacing EGR differential pressure sensor rubber piping	30	*3	
	Replacing water rubber piping	30	*3	
	Replacing lubricant rubber piping	30	*3	
	Changing radiator coolant (L.L.C.)	30		
	Replacing radiator hoses and clamp bands	31	*3	
	Replacing fuel pipes and clamp bands	31	*3 *4	

IMPORTANT :

*1 Air cleaner should be cleaned more often in dusty conditions than in normal conditions.

*2 After 6 times of cleaning.

*3 Consult your local KUBOTA Dealer for this service.

*4 When using biodiesel fuel, replace the fuel filter cartridge, fuel hoses and clamp bands with new ones at half intervals.

● The items listed above (@ marked) are registered as emission related critical parts by KUBOTA in the U.S. EPA nonroad emissions regulations. As the engine owner, you are responsible for the performance of the required maintenance on the engine according to the above instructions.

Please see the Warranty Statement in detail.

● The items listed above other than @ marked are not necessary to keep the emission related warranty valid.

● Failure to perform the maintenance will cause problems that will significantly degrade the engine performance.

RECOMMENDED OILS AND FUELS

■ Engine oil

IMPORTANT :

- Engine oil should be American Petroleum Institute (API) service classification **CJ-4** or **CK-4**.
- Change the type of engine oil according to the ambient temperature.

Above 25°C (77°F)	10W-30 or 10W-40 or 15W-40
-10°C to 25°C (14°F to 77°F)	
Below -10°C (14°F)	10W-30 or 10W-40

- Use of the following oil not only prevents the engine from performing well in low temperatures until it warms up sufficiently, but may also lead to excessive engine wear or engine seizure.
 - Oil with a viscosity higher than 10W-30
 - Oil not recommended by Kubota

■ Fuel

- The diesel fuel specification type and the sulfur content % (ppm) used must be compliant with all applicable emissions regulations for the area in which the engine is operated.
- Diesel fuels specified to EN 590 or ASTM D975 are recommended.
- When operating this engine in US EPA regulated areas, the use of ultra low sulfur fuel is mandatory for these engines. Therefore, use No.2-D S15 diesel fuel as an alternative to No.2-D, and use No.1-D S15 diesel fuel as an alternative to No.1-D for ambient temperatures below -10 °C (14 °F).
No.1-D or No.2-D, S15 : Ultra Low Sulfur Diesel (ULSD) 15 ppm or 0.0015 wt.%
- No.2-D is a distillate fuel of lower volatility for engines in industrial and heavy mobile service (SAEJ313 JUN87).

◆ List of abbreviations

ASTM	American Society of Testing and Materials
EN	European Norm
SAE	Society of Automotive Engineers
ULSD	Ultra Low Sulfur Diesel
US EPA	United States Environmental Protection Agency

- Cetane rating : The minimum recommended fuel cetane rating is 45. A cetane rating greater than 50 is preferred, especially for ambient temperatures below -20 °C (-4 °F) or elevations above 1500 m (5000 ft).
- DO NOT USE Fuels that have sulfur content greater than 0.0015 % (15 ppm).

■ Biodiesel fuel (BDF)

When using biodiesel fuel, make sure that it meets the latest regional standards. See the table below.


Fuel type	Applicable standard
Mineral oil diesel fuel used to make BDF	ASTM D975
B100 fuel used to make BDF	ASTM D6751
The final blended fuel B5	ASTM D975
The final blended fuel B7	---

◆ Precautions in handling Biodiesel fuels


1. Keep the fuel tank full whenever possible to prevent water vapor from accumulating inside the fuel tank. Tighten up the fuel tank filler cap to avoid the entry of moisture.
2. Routinely check the oil level before the operation. Also strictly follow the specified oil change intervals.
3. Biodiesel fuels (BDF) during the supply process or in the machine easily deteriorate due to oxygen, water, heat and other foreign substances. With this in mind, take the following precautions.
 - Do not leave those fuels in the fuel tank or a metallic drum longer than 3 months.
 - Before storing the machine for a prolonged period, change such fuel for a conventional type of diesel fuel and operate the machine for 30 minutes or longer to clean up the fuel system.
4. Bear it in mind that Biodiesel fuels have the characteristics below. Referring to the servicing intervals specified in the KUBOTA product's Operator's Manuals, be sure to maintain and clean up the fuel system, replace the fuel rubber piping with new ones and take other necessary measures. It is advisable to replace the fuel filter with a new one after half the specified replacement intervals.
(Compared with the use of mineral oil diesel fuels, the filtration performance of fuel filters gets degraded earlier than expected.)
 - Biodiesel fuels easily induce the growth of microorganisms and foul themselves. This may get the fuel system corroded and the fuel filter clogged.
 - In cold weather, some problems may occur: the clog of the fuel line or fuel system, starting failure, and other unforeseen troubles.
 - Biodiesel fuels easily soak up moisture, which means that they may contain higher moisture content than conventional diesel fuels.
5. Palm oil-based Biodiesel fuels are inferior in low-temperature fluidity to soy-based and rapeseed-based Biodiesel fuels. In cold season in particular, this may clog the fuel filter.
6. If Biodiesel fuels are spilt on a coated surface, the coating may get damaged. Immediately wipe the spill off the surface.

Water separator

[Type 1]

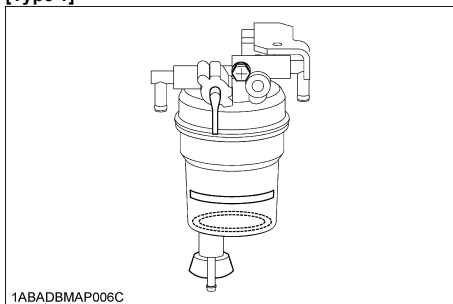

[Type 2]

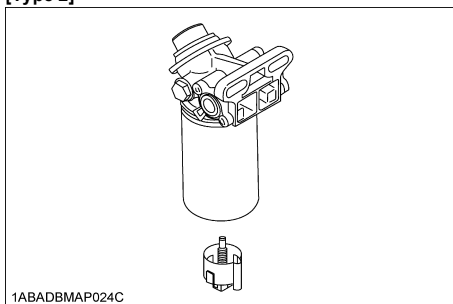

DAILY CHECKS

For your own safety and to assure the long life of your machine, a careful check should be made before each operation.

Checking engine oil level



WARNING

To avoid personal injury or death:


- Stop the engine before checking and changing the engine oil and the oil filter cartridge.
- Do not touch muffler or exhaust pipes while they are hot; Severe burns could result. Always stop the engine and allow it to cool before conducting inspections, maintenance, or for a cleaning procedure.
- Contact with engine oil can damage your skin. Put on gloves when using engine oil. If you come in contact with engine oil, wash it off immediately.

IMPORTANT :

- Do not operate a diesel engine when engine oil is overfilled. This oil can drain through the air intake system, which cause engine disacceleration and oil leaks from breather piping. It could result in an overrunning or oil hammering of engine in case of the engine with suction blow-by gases breathed in.


1. Check the engine oil level before starting or more than 5 minutes after stopping the engine.
2. Remove the oil level gauge, wipe it clean and reinstall it.
3. Take the oil level gauge out again, and check the oil level.

[D1803-CR-TIE4, V2403-CR-TIE4, V2403-CR-TE4-BG, V2403-CR-TIE4-BG]

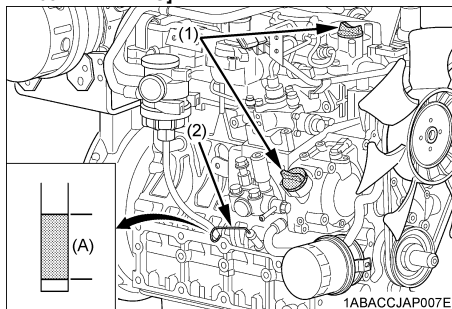



- (1) Oil filler plug
- (2) Oil level gauge

[Lower end of oil level gauge]
(A) Engine oil level within this range is proper.

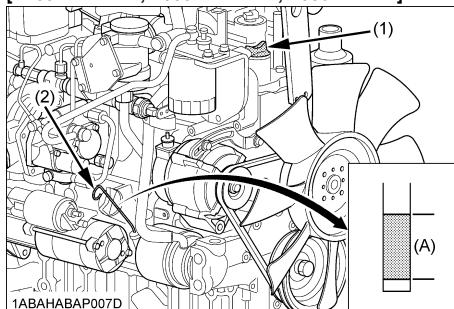[V2607-CR-TIE4, V3307-CR-TIE4, V3307-TIE4A]

- (1) Oil filler plug
(2) Oil level gauge

[Lower end of oil level gauge]
(A) Engine oil level within this range is proper.

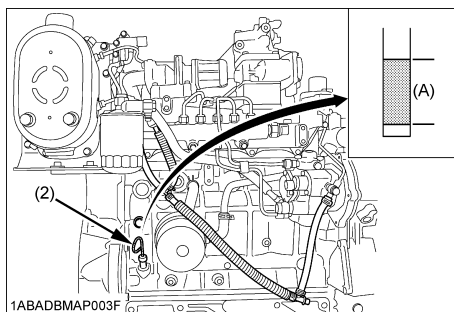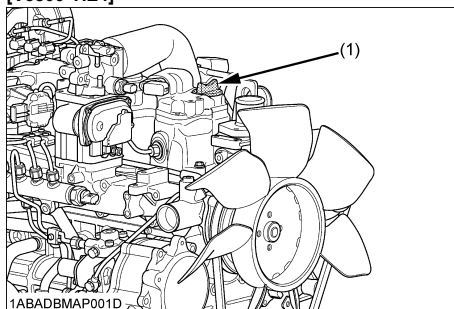[V3800-TIE4]

- (1) Oil filler plug
(2) Oil level gauge

[Lower end of oil level gauge]
(A) Engine oil level within this range is proper.

4. If the oil level is too low, remove the oil filler plug, and add new oil to the prescribed level.
5. After adding oil, wait more than 5 minutes and check the oil level again. It takes some time for the oil to drain down to the oil pan.

Models	Engine oil quantity
D1803-CR-TIE4	7.0 L (1.85 U.S. gals.)
V2403-CR-TIE4 V2403-CR-TE4-BG V2403-CR-TIE4-BG	9.5 L (2.51 U.S. gals.)
V2607-CR-TIE4	10.2 L (2.69 U.S. gals.)
V3307-CR-TIE4 V3307-TIE4A	11.2 L (2.95 U.S. gals.)
V3800-TIE4	13.2 L (3.49 U.S. gals.)

IMPORTANT :

- When using oil of different brands from the previous one, drain all the previous oil before adding the new engine oil.

NOTE :

- Always place the engine on a level surface before inspecting it.

If placed on gradients, oil quantity may not be measured accurately.

■ Checking fuel level and refueling

Fuel is flammable and can be dangerous. You should handle fuel with care.

**WARNING**

To avoid personal injury or death:

- Do not mix gasoline or alcohol with diesel fuel. This mixture can cause an explosion.
- Be careful not to spill fuel during refueling. If fuel should spill, wipe it off at once, or it may cause a fire.
- Do not fail to stop the engine before refueling. Keep the engine away from the fire.
- Stop the engine while refueling or bleeding and when cleaning or changing fuel filter or fuel pipes. Do not smoke when working around the battery or when refueling.
- Check the fuel systems at a well ventilated and wide place.

1. Check to see that the fuel level is above the lower limit of the fuel level gauge.
2. If the fuel is too low, add fuel to the upper limit. Do not overflow.

IMPORTANT :

- Use a strainer when filling the fuel tank, or dirt or sand in the fuel may cause trouble.
- Do not run the fuel tank level too low or completely out of fuel. You may experience improper engine running and/or a DTC (Diagnostic Trouble Code) error code may be recorded in the Engine Control. Additionally, fuel system bleeding may be necessary if air enters the fuel system.
- Fuel must be controlled carefully to prevent the additives being mixed into fuel such as fuel tank anti-oxidants, water remover, antifreeze and so on. Otherwise, the fuel filter may become clogged, the fuel lubrication part in the injector may not slide properly, and the engine may be adversely affected, resulting in a malfunction.

■Checking coolant level

Coolant will last for one day's work if filled all the way up before operation start. Make it a rule to check the coolant level before every operation.




WARNING

To avoid personal injury or death:


- Do not stop the engine suddenly, stop it after about 5 minutes of unloaded idling.
- Work only after letting the engine and the radiator cool off completely (more than 30 minutes after it has been stopped).
- Do not remove the radiator cap while coolant is hot. When cool to the touch, rotate cap to the first stop to allow excess pressure to escape. Then remove cap completely. If overheats should occur, steam may gush out from the radiator or the reserve tank; Severe burns could result.

1. Remove the radiator cap, after the engine has completely cooled, and check to see that coolant reaches the supply port.

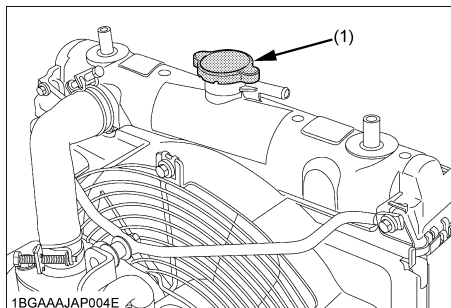

(1) Radiator pressure cap

2. If the radiator is provided with a reserve tank, check the coolant level of the reserve tank. When it is between the "FULL" and "LOW" marks, the coolant will last for one day's work.

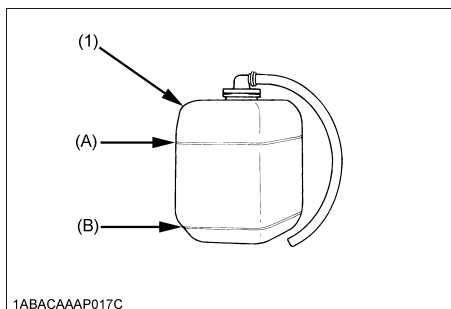


(1) Reserve tank

(A) "FULL"
(B) "LOW"

- When the coolant level drops due to evaporation, add water only up to the full level.

[D1803-CR-TIE4, V2403-CR-TIE4, V2403-CR-TE4-BG, V2403-CR-TIE4-BG, V2607-CR-TIE4, V3307-CR-TIE4]


- Check to see the drain plug; which is at the lower part of the radiator as figures below.

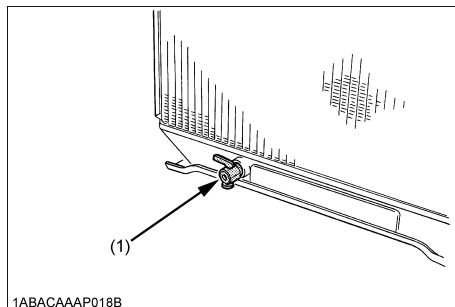


(1) Coolant drain plug

[V3800-TIE4]

- Check to see that two drain plug; one is at the crankcase side and the other is at the lower part of the radiator as figures below.

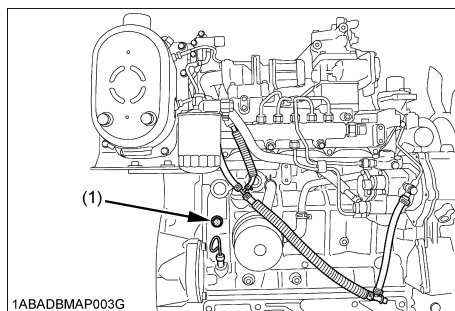

1ABADBMAP003G

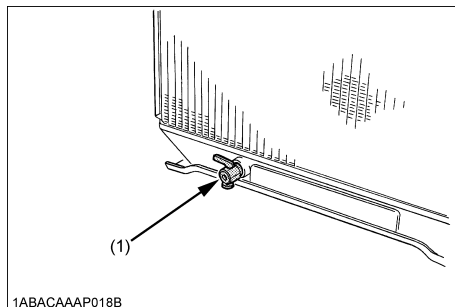

1ABACAAAP018B

(1) Coolant drain plug

IMPORTANT :

- If the radiator cap has to be removed, follow the caution and securely retighten the cap.
- If coolant should be leak, consult your local KUBOTA Dealer.
- Make sure that muddy or sea water does not enter the radiator.
- Use clean, fresh water and 50% antifreeze to fill the reserve tank.
- Do not refill reserve tank with coolant over the "FULL" level mark.
- Close the radiator cap securely. If the cap is loose or improperly closed, coolant may leak out and decrease quickly.

■ Antifreeze



WARNING

To avoid personal injury or death:

- When using antifreeze, put on some protection such as rubber gloves (Antifreeze is poisonous.).
- If it is swallowed, seek immediate medical help. Do NOT make a person throw up unless told to do so by poison control or a health care professional. Use standard first aid and CPR for signs of shock or cardiac arrest. Call your local Poison Control Center or your local emergency number for further assistance.
- When antifreeze comes in contact with the skin or clothing, wash it off immediately.
- Do not mix different types of antifreeze. The mixture can produce chemical reaction causing harmful substances.
- Antifreeze is extremely flammable and explosive under certain conditions. Keep fire and children away from antifreeze.
- When draining fluids from the engine, place some container underneath the engine body.
- Do not pour waste onto the grounds, down a drain, or into any water source.
- Also, observe the relevant environmental protection regulations when disposing of antifreeze.

Always use a 50/50 mix of long-life coolant and clean soft water in KUBOTA engines.

Contact KUBOTA concerning coolant for extreme conditions.

1. Long-life coolant (hereafter LLC) comes in several types. Use ethylene glycol (EG) type for this engine.
2. Before employing LLC-mixed cooling water, flush the radiator with fresh water. Repeat this procedure 2 or 3 times to clean up the radiator and engine block from inside.
3. Mixing the LLC
Premix 50% LLC with 50% clean soft water. When mixing, stir it up well, and then fill into the radiator.
4. The procedure for the mixing of water and antifreeze differs according to the make of the antifreeze. Refer to SAE J1034 standard, more specifically also to SAE J814c.

Vol % Antifreeze	Freezing Point		Boiling Point *	
	°C	°F	°C	°F
50	-37	-34	108	226

*At $1.013 \times 10^5 \text{ Pa}$ (760 mmHg) pressure (atmospheric). A higher boiling point is obtained by using a radiator pressure cap which permits the development of pressure within the cooling system.

5. Adding the LLC
 - (1) Add only water if the coolant level reduces in the cooling system by evaporation.
 - (2) If there is a coolant leak, add the LLC of the same manufacturer and type in the same coolant percentage.

*Never add any long-life coolant of different manufacturer. (Different brands may have different additive components, and the engine may fail to perform as specified.)
6. When the LLC is mixed, do not employ any radiator cleaning agent. The LLC contains anti-corrosive agent. If mixed with the cleaning agent, sludge may build up, adversely affecting the engine parts.
7. Kubota's genuine long-life coolant has a service life of 2 years. Always change the coolant every 2 years.

NOTE :

- The above data represents industry standards that necessitate minimum glycol content in the concentrated antifreeze.

■Checking fan belt

(See "Adjusting fan belt tension" in "EVERY 250 SERVICE HOURS" in "REGULAR CHECKS AND MAINTENANCE WORK" section.)


■For the air cleaner with a dust cup (optional)

Remove and clean out the dust cup before it becomes half full with dust; usually once a week, or even every day if the working surroundings are dusty.

Install the air cleaner dust cup with "TOP" indicated on the rear of the cup in the up position. (However, it may be installed in either direction when the cover is placed at the lower part.)

IMPORTANT :

- If the dust cup is mounted incorrectly, dust or dirt does not collect in the cup, and direct attachments of the dust to the element will cause its lifetime to shorten to a great extent.

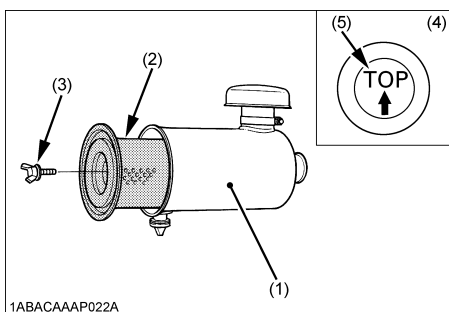

- (1) Air cleaner body
- (2) Element
- (3) Wing bolt
- (4) Dust cup
- (5) "TOP" mark

■Dust indicator (optional)

If the red signal on the dust indicator attached to the air cleaner is visible, the air cleaner has reached the service level.

Clean the element immediately, and reset the signal with the "RESET" button.

REGULAR CHECKS AND MAINTENANCE WORK

EVERY 50 SERVICE HOURS

■ Checking fuel pipes and clamp bands



WARNING


To avoid personal injury or death:

- Stop the engine before checking or replacing the fuel pipes. Broken fuel pipes can cause fires.

Check the fuel pipes every 50 hours of operation. When if;


1. If any one of the clamp bands is loose, apply oil to the screw of the band, and tighten the band securely.
2. If the fuel pipes, made of rubber, become worn out, replace them and the clamp bands every 2 years.
3. If the fuel pipes and clamp bands are found worn or damaged within 2 years' of use, replace or repair them at once.

[D1803-CR-TIE4, V2403-CR-TIE4, V2403-CR-TE4-BG, V2403-CR-TIE4-BG]

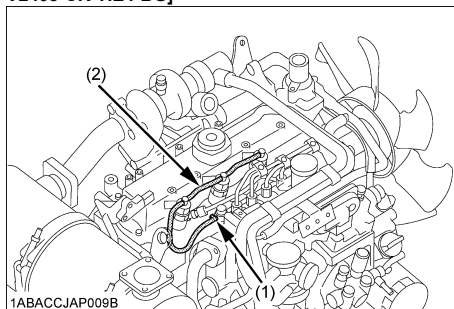


- (1) Clamp bands
(2) Fuel pipes

[V2607-CR-TIE4, V3307-CR-TIE4]

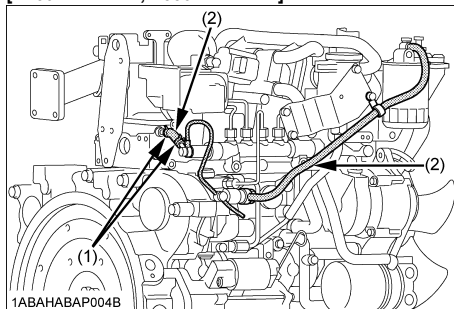


- (1) Clamp bands
(2) Fuel pipes

[V3307-TIE4A]

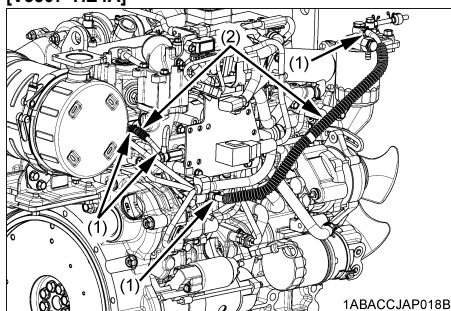

- (1) Clamp bands
(2) Fuel pipes

[V3800-TIE4]

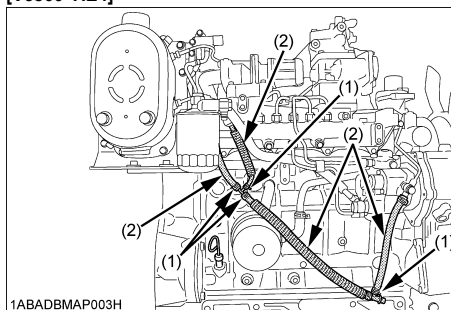

- (1) Clamp bands
(2) Fuel pipes

■ Draining water separator


[Checking and Draining]

Water and dirt contained in fuel will settle down in the water separator. When such foreign substances are deposited, set the water separator handle to the "CLOSE" position. Loosen the top screw first and then the bottom drain valve to let the foreign substances out of the separator.

Finally bleed the air from the fuel system.

[Cleaning]

1. Set the water separator handle to the "CLOSE" position.
2. Loosen and remove the cup proper, and clean its inside with light oil.
3. Tighten up the cup proper.

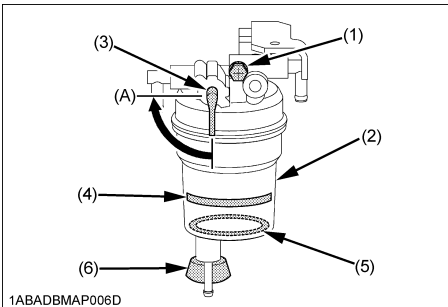

- 1ABADBMAP006D
- (1) Screw
 - (2) Cup
 - (3) Water separator handle
 - (4) Line
 - (5) Float
 - (6) Drain valve

(A) Close

IMPORTANT :


- As water is collected, the red float goes up. When the float has reached the specified line, immediately drain the water separator.
- In reattaching the water separator, be careful to keep off dust and dirt.
- Bleed the air from the fuel system before getting the engine restarted.

EVERY 250 SERVICE HOURS

■ Cleaning air cleaner element

Since the air cleaner employed on this engine is a dry type, never apply oil to it.

1. Open the evacuator valve once a week under ordinary conditions - or daily when used in a dusty place. This will get rid of large particles of dust and dirt.
2. Wipe the inside air cleaner clean with cloth if it is dirty or wet.
3. Avoid touching the element except when cleaning.
4. When dry dust adheres to the element, blow compressed air from the inside turning the element. Pressure of compressed air must be under 205 kPa (2.1 kgf/cm², 30 psi).
5. Replace the primary element every year or every 6 cleanings. If the primary element is stained heavily, replace it soon. At this time, replace the secondary element too.
6. The secondary element should be removed only if it is to be replaced.
7. To protect the engine, do not remove the secondary element in servicing the primary element.

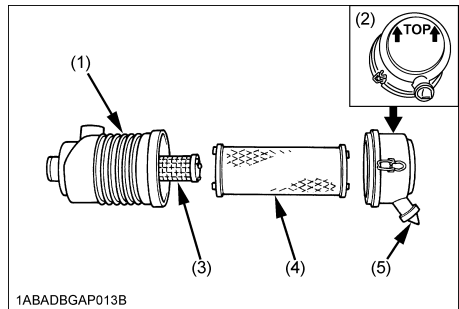

- 1ABADBGAP013B
- (1) Air cleaner body
 - (2) Dust cup
 - (3) Secondary element
 - (4) Primary element
 - (5) Evacuator valve

IMPORTANT :

- Make sure that the hooking clip for the element is tight enough. If it is loose, dust and dirt may be sucked in, wearing down the cylinder liner and piston ring earlier and thereby resulting in poor power output.
- Do not overservice the air cleaner element. Overservicing may cause dirt to enter the engine causing premature wear. Use the dust indicator as a guide on when to service.

◆ Cleaning primary air cleaner element

1. To clean the element, use clean dry compressed air on the inside of the element. Air pressure at the nozzle must not exceed 205 kPa (2.1 kgf/cm², 30psi). Maintain reasonable distance between the nozzle and the filter.

■ Adjusting fan belt tension



WARNING

To avoid personal injury or death:

- Stop the engine and remove the key before checking the belt tension.
- Reinstall the detached safety shield after maintenance or checking.


1. Stop the engine and remove the key.
2. Apply moderate thumb pressure to belt between the pulleys.
3. If tension is incorrect, loosen the alternator mounting bolts and, using a lever placed between the alternator and the engine block, pull the alternator out until the deflection of the belt falls within acceptable limits.
4. Replace fan belt if it is damaged.

IMPORTANT :

- If belt is loosen or damaged and the fan is damaged, it could result in overheats or insufficient charging. Correct or replace belt.
- Use a sonic tension meter to measure tension. Always measure properly according to the operation manual of the device being used.
- Measure immediately after installing the belt without rotating the pulleys. Measure at location (B) in the figure with (L) as the distance between the pulleys.
- For the belt specifications, contact your KUBOTA dealer.
- If a tension meter cannot be used, adjust based on the deflection. The deflection must be as indicated by (A) in the figure, when pressing the middle of the belt between the pulleys.

[D1803-CR-TIE4, V2403-CR-TIE4, V2403-CR-TE4-BG, V2403-CR-TIE4-BG]

Proper fan belt tension		
Adjustment	Replacement	(A)
237 to 403 N	460 to 680 N	10 to 12 mm (0.39 to 0.47 in.) (under load of 10 kgf (22.1 lbs))

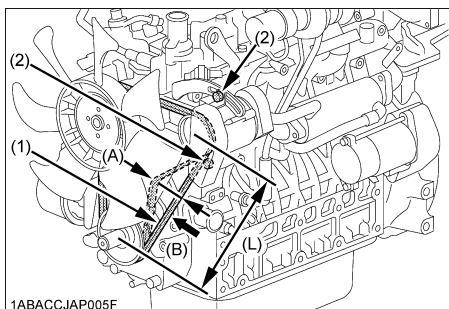


1ABACCJAP005F

- (1) Fan belt
(2) Bolt and nut

[V2607-CR-TIE4, V3307-CR-TIE4, V3307-TIE4A]

Proper fan belt tension		
Adjustment	Replacement	(A)
392 to 480 N	441 to 650 N	10 to 12 mm (0.39 to 0.47 in.) (under load of 10 kgf (22.1 lbs))

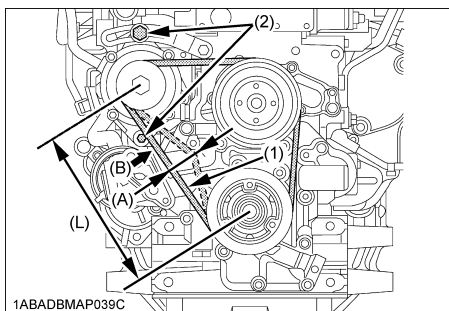


1ABADBMAP039C

- (1) Fan belt
(2) Bolt and nut

[V3800-TIE4]

Belt type	Proper fan belt tension		(A)
	Adjustment	Replacement	
V Ribbed Belt Rib Number : 6	420 to 550 N	650 to 850 N	9 to 11 mm (0.35 to 0.43 in.) (under load of 6 to 7 kgf (13.2 to 15.4 lbs))
V Ribbed Belt Rib Number : 4	480 to 580 N	680 to 780 N	10 to 13 mm (0.39 to 0.51 in.) (under load of 6 to 7 kgf (13.2 to 15.4 lbs))
V Belt	392 to 480 N	441 to 531 N	10 to 12 mm (0.39 to 0.47 in.) (under load of 6 to 7 kgf (13.2 to 15.4 lbs))

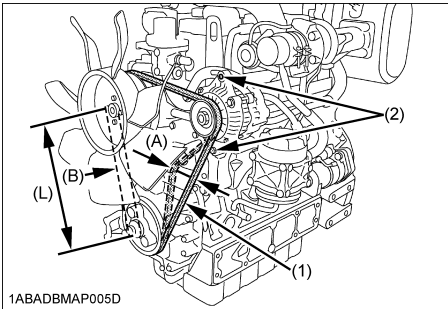

- (1) Fan belt
(2) Bolt and nut

■ Checking intake air line

Visually check for cracks, gas leak and anything else unusual.

Check to see if the lock bolts and nuts are tight enough. In particular, the hose between the turbo charger and the intake manifold must be checked for cracks and come-off. This is because this line will be under high pressure. See if this hose is deep enough into the pipe. If not, reinsert the hose deeper. Put the clamp on the hose free of the bulge of the pipe, and tighten the clamp bolt to the specified torque.

EVERY 250 HOURS OR 6 MONTHS

■ Checking radiator hoses and clamp bands



WARNING

To avoid personal injury or death:

- Check the radiator hoses and clamp bands periodically. If any one of the radiator hoses is damaged or coolant leaks, overheats or severe burns could occur.

Check to see if radiator hoses are properly fixed every 250 hours of operation or 6 months, whichever comes first.

1. If any one of the hose clamps is loose or coolant leaks, tighten the hose clamp securely.
 2. Replace hoses and tighten hose clamps securely, if radiator hoses are swollen, hardened or cracked.
- Replace hoses and hose clamps every 2 years or earlier, if checked and found that the hoses are swollen, hardened or cracked.

■ Precaution at overheating

[V3800-TIE4]

The event that the coolant temperature is nearly or more than the boiling point is called "OVERHEATING".

While running, make the following checks to see that all parts are working correctly. **If anything is unusual, inspect it, referring to the relevant description in "MAINTENANCE" and "REGULAR CHECKS AND MAINTENANCE WORK" section.**

◆ Coolant

If the coolant temperature warning lamp lights up or if steam or coolant does not stop squirting from the radiator overflow pipe, turn off the load and **keep the engine idling (COOLING-DOWN) for at least 5 minutes** to let it cool down gradually. Then stop the engine and take the following inspection and servicing.

1. Check to see if the coolant runs short or if there is any coolant leak;
2. Check to see if there is any obstacle around the cooling air inlet or outlet;
3. Check to see if there is any dirt or dust between the radiator fins and tubes;
4. Check to see if the fan belt is too loose; and check to see if the radiator water pipes are clogged.

EVERY 400 or 500 SERVICE HOURS

■ Changing engine oil

[D1803-CR-TIE4, V2403-CR-TIE4, V2403-CR-TE4-BG, V2403-CR-TIE4-BG]




WARNING

To avoid personal injury or death:

- Stop the engine before draining engine oil.
- When draining engine oil, place some container underneath the engine and dispose it according to local regulations.
- Do not drain oil after running the engine. Allow engine to cool down sufficiently.

1. Change oil after the initial 50 hours of operation and every 400 or 500 hours thereafter. When the annual operating hours are below 400 or 500 hours replace the oil every year.
2. Remove the drain plug at the bottom of the engine, and drain all the old oil. Drain oil will drain easier when the oil is warm.

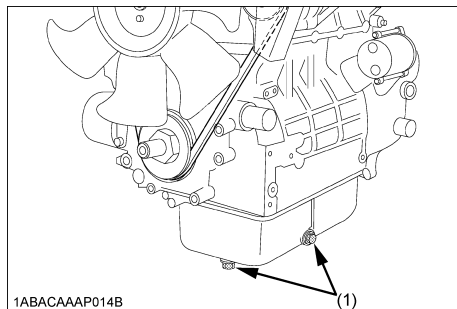

(1) Oil drain plug

3. When letting out the oil, remove the filler plug too. With the filler plug still in place, it would be difficult to discharge the oil completely.
4. Add new engine oil up to the upper limit of the oil level gauge. Be careful not to add oil above the upper limit of the oil level gauge.

■ Replacing oil filter cartridge

[D1803-CR-TIE4, V2403-CR-TIE4, V2403-CR-TE4-BG, V2403-CR-TIE4-BG]




WARNING

To avoid personal injury or death:

- Stop the engine before changing the oil filter cartridge.
- Allow engine to cool down sufficiently, oil can be hot and cause burns.

1. Replace the oil filter cartridge. Oil filter cartridge should be replaced after the initial 50 hours of operation and every 400 or 500 hours thereafter.
2. Remove the old oil filter cartridge with a filter wrench.
3. Apply a film of oil to the gasket for the new cartridge.
4. Screw in the cartridge by hand. When the gasket contacts the seal surface, tighten the cartridge enough by hand. Because, if you tighten the cartridge with a wrench, it will be tightened too much.

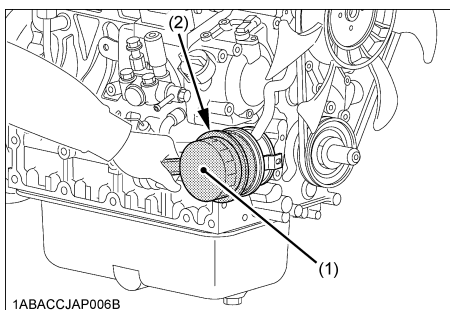

(1) Oil filter cartridge

(2) Remove with a filter wrench (Tighten with your hand)

5. After the new cartridge has been replaced, the engine oil level normally decreases a little. Thus, run the engine for a while and check for oil leaks through the seal before checking the engine oil level. Add oil if necessary.

NOTE :

- Wipe off any oil sticking to the machine completely.
- As for the changing engine oil interval and the replacing oil filter cartridge interval, please consult your local KUBOTA Dealer for this service.

EVERY 500 SERVICE HOURS

■ Replacing fuel filter cartridge

1. Replace the fuel filter cartridge with a new one every 500 operating hours.
2. Apply fuel oil thinly over the gasket and tighten the cartridge into position by hand-tightening only.
3. Finally, vent the air.

IMPORTANT :

- Replace the fuel filter cartridge periodically to prevent wear of the supply pump or the injector, due to dirt in the fuel.
- When using biodiesel fuel, change the fuel filter cartridge with new one at half intervals (250 hours).

NOTE :

- The fuel filter cartridge and water separator should be replaced earlier according to the fuel classification in use.

■ Replacing oil filter cartridge

[V2607-CR-TIE4, V3307-CR-TIE4, V3307-TIE4A, V3800-TIE4]




WARNING

To avoid personal injury or death:

- Stop the engine before changing the oil filter cartridge.
 - Allow engine to cool down sufficiently, oil can be hot and cause burns.
1. Replace the oil filter cartridge. Oil filter cartridge should be replaced after the initial 50 hours of operation and every 500 hours thereafter.
 2. Remove the old oil filter cartridge with a filter wrench.
 3. Apply a film of oil to the gasket for the new cartridge.
 4. Screw in the cartridge by hand. When the gasket contacts the seal surface, tighten the cartridge enough by hand. Because, if you tighten the cartridge with a wrench, it will be tightened too much.


[V2607-CR-TIE4, V3307-CR-TIE4, V3307-TIE4A]

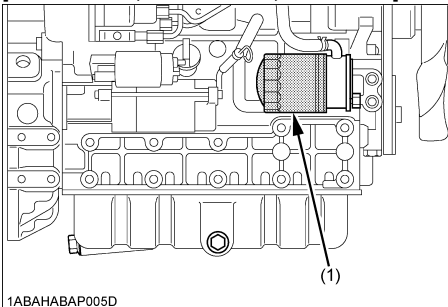

1ABAHABAP005D

(1) Oil filter cartridge

[V3800-TIE4]

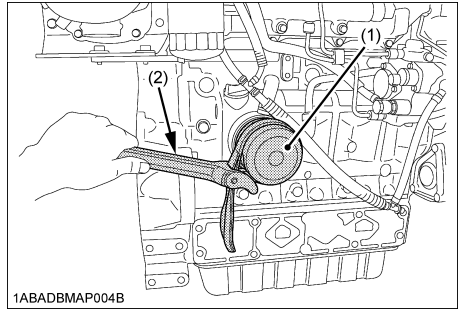

1ABADBMAP004B

- (1) Oil filter cartridge
- (2) Remove with a filter wrench (Tighten with your hand)

5. After the new cartridge has been replaced, the engine oil level normally decreases a little. Thus, run the engine for a while and check for oil leaks through the seal before checking the engine oil level. Add oil if necessary.

NOTE :

- Wipe off any oil sticking to the machine completely.

■ Cleaning water separator (Type 1)

(See "Draining water separator" in "EVERY 50 SERVICE HOURS" in "REGULAR CHECKS AND MAINTENANCE WORK" section.)

■ Removing sediment in fuel tank

Consult your local KUBOTA Dealer for this service.

■ Cleaning fuel tank interior

[V2607-CR-TIE4, V3307-CR-TIE4, V3307-TIE4A, V3800-TIE4]

Consult your local KUBOTA Dealer for this service.

■ Cleaning water jacket (radiator interior)

Consult your local KUBOTA Dealer for this service.

■ Replacing fan belt

[D1803-CR-TIE4, V2403-CR-TIE4, V2403-CR-TE4-BG, V2403-CR-TIE4-BG]

Consult your local KUBOTA Dealer for this service.

(See "Adjusting fan belt tension" in "EVERY 250 SERVICE HOURS" in "REGULAR CHECKS AND MAINTENANCE WORK" section.)

EVERY 500 SERVICE HOURS OR 1 YEAR

■ Changing engine oil

[V2607-CR-TIE4, V3307-CR-TIE4, V3307-TIE4A, V3800-TIE4]




WARNING

To avoid personal injury or death:

- Stop the engine before draining engine oil.
- When draining engine oil, place some container underneath the engine and dispose it according to local regulations.
- Do not drain oil after running the engine. Allow engine to cool down sufficiently.

1. Change oil after the initial 50 hours of operation and every 500 hours thereafter. When the annual operating hours are below 500, replace the oil every year.
2. Remove the drain plug at the bottom of the engine, and drain all the old oil. Drain oil will drain easier when the oil is warm.


[V2607-CR-TIE4, V3307-CR-TIE4, V3307-TIE4A]

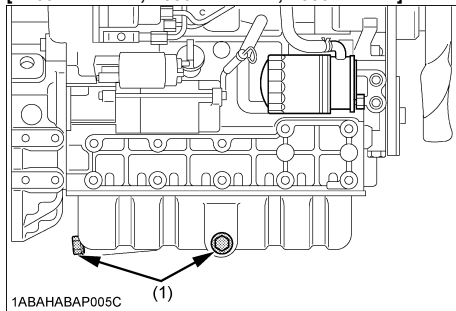

1ABAHABAP005C

(1) Oil drain plug

[V3800-TIE4]

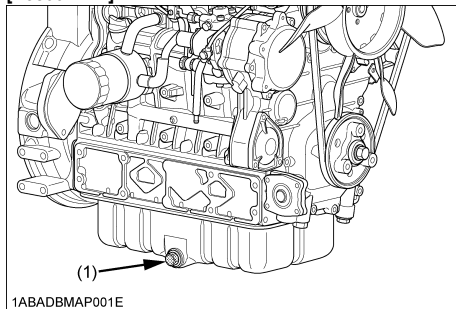


1ABADBMAP001E

(1) Oil drain plug

3. When letting out the oil, remove the filler plug too. With the filler plug still in place, it would be difficult to discharge the oil completely.
4. Add new engine oil up to the upper limit of the oil level gauge. Be careful not to add oil above the upper limit of the oil level gauge.

■ Replacing water separator filter (Type 2)

1. Replace the water separator filter with a new one every 500 hours or 1 year.
2. Remove the old water separator filter with a filter wrench.
3. Apply a film of oil to the gasket for the new water separator filter.
4. Screw in the water separator filter by hand. Because, if you tighten the water separator filter with a wrench, it will be tightened too much.

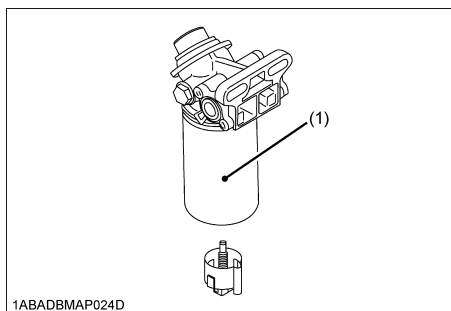

1ABADBMAP024D

(1) Water separator filter

IMPORTANT :

- Replace the water separator filter periodically to prevent wear of the supply pump or the injector, due to dirt in the fuel.

EVERY 500 SERVICE HOURS OR 2 YEARS

■ Replacing fan belt

[V2607-CR-TIE4, V3307-CR-TIE4, V3307-TIE4A, V3800-TIE4]

Consult your local KUBOTA Dealer for this service.

(See "Adjusting fan belt tension" in "EVERY 250 SERVICE HOURS" in "REGULAR CHECKS AND MAINTENANCE WORK" section.)

EVERY 1000 SERVICE HOURS

■ Checking valve clearance

Consult your local KUBOTA Dealer for this service.

EVERY 1500 SERVICE HOURS

■ Checking injector tip

Consult your local KUBOTA Dealer for this service.

■ Checking EGR cooler

Consult your local KUBOTA Dealer for this service.

■ Changing oil separator element

[D1803-CR-TIE4, V2403-CR-TIE4, V2403-CR-TE4-BG, V2403-CR-TIE4-BG, V2607-CR-TIE4, V3307-CR-TIE4, V3800-TIE4]

*If equipped with the oil separator




WARNING

To avoid personal injury or death:

- Stop the engine before changing the oil separator element.


1. Remove the cover and take out the oil separator element and gasket. Then wipe oil and grease off the zone in question.
2. Fit a new oil separator element and gasket into position.

[D1803-CR-TIE4, V2403-CR-TIE4, V2403-CR-TE4-BG, V2403-CR-TIE4-BG]

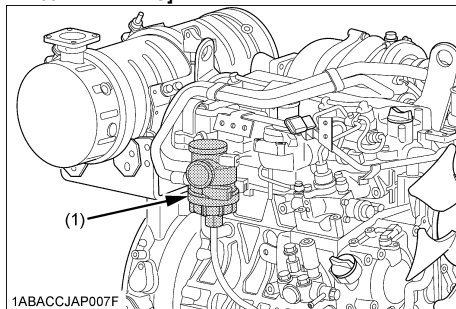


(1) Oil separator

[V2607-CR-TIE4, V3307-CR-TIE4]

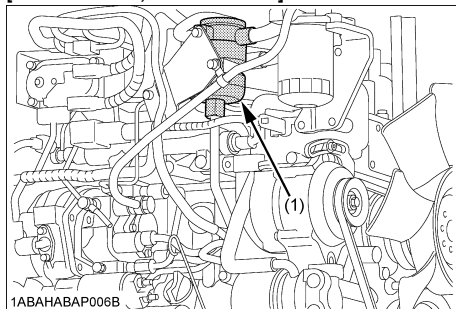


(1) Oil separator

[V3800-TIE4]

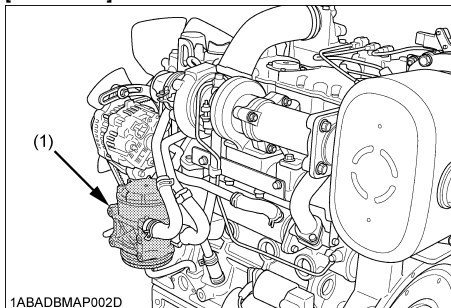

(1) Oil separator

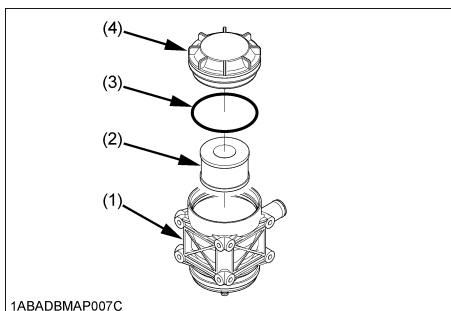

- (1) Body
(2) Oil separator element
(3) Gasket
(4) Cover

■ Checking Positive Crankcase Ventilation valve (PCV valve)

[D1803-CR-TIE4, V2403-CR-TIE4, V2403-CR-TE4-BG, V2403-CR-TIE4-BG, V2607-CR-TIE4, V3307-CR-TIE4, V3800-TIE4]

Consult your local KUBOTA Dealer for this service.

EVERY 3000 SERVICE HOURS

■ Checking turbo charger

Consult your local KUBOTA Dealer for this service.

■ Checking EGR System

Consult your local KUBOTA Dealer for this service.

ANNUAL SERVICING

■ Replacing air cleaner element

Consult your local KUBOTA Dealer for this service.

(See "Cleaning air cleaner element" in "EVERY 250 SERVICE HOURS" in "REGULAR CHECKS AND MAINTENANCE WORK" section.)

■ Checking EGR piping

Consult your local KUBOTA Dealer for this service.

■ Checking intake air line

Visually check for cracks, gas leak and anything else unusual.

Check to see if the lock bolts and nuts are tight enough. In particular, the hose between the turbo charger and the intake manifold must be checked for cracks and come-off. This is because this line will be under high pressure.

See if this hose is deep enough into the pipe. If not, reinsert the hose deeper. Put the clamp on the hose free of the bulge of the pipe, and tighten the clamp bolt to the specified torque.

■ Checking exhaust manifold for cracks or gas leak and for looseness or damage

Visually check for cracks, damages, gas leak and anything else unusual.

Check to see if the lock bolts and nuts are tight enough.

BIENNIAL SERVICING

■ Replacing rubber piping related oil separator

[D1803-CR-TIE4, V2403-CR-TIE4, V2607-CR-TIE4, V3307-CR-TIE4, V3800-TIE4]

Consult your local KUBOTA Dealer for this service.

■ Replacing intake air line and suction air pressure takeout rubber piping

Consult your local KUBOTA Dealer for this service.

■ Replacing boost sensor pressure rubber piping

[V2607-CR-TIE4, V3307-CR-TIE4, V3307-TIE4A, V3800-TIE4]

Consult your local KUBOTA Dealer for this service.

■ Replacing EGR cooler rubber piping

Consult your local KUBOTA Dealer for this service.

■ Replacing EGR differential pressure sensor rubber piping

[V3307-TIE4A]

Consult your local KUBOTA Dealer for this service.

■ Replacing water rubber piping

Consult your local KUBOTA Dealer for this service.

■ Replacing lubricant rubber piping

Consult your local KUBOTA Dealer for this service.

■ Changing radiator coolant (L.L.C.)

1. To drain coolant, always open both drain plugs and simultaneously open the radiator cap as well. With the radiator cap kept closed, a complete drain of coolant is impossible.
2. Remove the overflow pipe of the radiator pressure cap to drain the reserve tank.

NOTE :

- If the recovery tank is under pressure, make sure that the recovery tank is cool enough and free from pressure inside.

3. Prescribed coolant volume (U.S. gallons)

Models	Quantity
D1803-CR-TIE4	5.8 L (1.53 U.S. gals.)
V2403-CR-TIE4 V2403-CR-TE4-BG V2403-CR-TIE4-BG	8.4 L (2.22 U.S. gals.)
V2607-CR-TIE4	6.0 L (1.59 U.S. gals.)
V3307-CR-TIE4 V3307-TIE4A	6.3 L (1.67 U.S. gals.)
V3800-TIE4	9.0 L (2.38 U.S. gals.)

NOTE :

- Coolant quantities shown are for standard radiators.

4. An improperly tightened the radiator cap or a gap between the cap and the seat quickens loss of coolant.
5. Coolant (Radiator cleaner and antifreeze)

Season	Coolant
All seasons	Pure water and antifreeze (See "Antifreeze" in "DAILY CHECKS" in "MAINTENANCE" section.)

■ Remedies for quick decrease of coolant

1. Check any dust and dirt between the radiator fins and tubes. If any, remove them from the fins and the tubes.
2. Check the fan belt tension. If loose, tighten it securely.
3. Check the internal blockage in the radiator hoses. If scale forms in the hoses, clean with the scale inhibitor or its equivalent.

■ Replacing radiator hoses and clamp bands

Consult your local KUBOTA Dealer for this service.
(See "Checking radiator hoses and clamp bands" in "EVERY 250 SERVICE HOURS" in "REGULAR CHECKS AND MAINTENANCE WORK" section.)

■ Replacing fuel pipes and clamp bands

Consult your local KUBOTA Dealer for this service.
(See "Checking fuel pipes and clamp bands" in "EVERY 50 SERVICE HOURS" in "REGULAR CHECKS AND MAINTENANCE WORK" section.)

When using biodiesel fuel, change the fuel pipes and clamp bands with new ones at half intervals.

■ Replacing intake air line

[D1803-CR-TIE4, V2403-CR-TIE4, V2403-CR-TE4-BG, V2403-CR-TIE4-BG]


Consult your local KUBOTA Dealer for this service.

SERVICE AS REQUIRED

■ Draining water separator (Type 2)

If water or impurities collect in the water separator, the indicator in the monitor will light up. For more details, refer to the operator's manual for the equipment.

If this should happen during operation, drain from the switch assy.

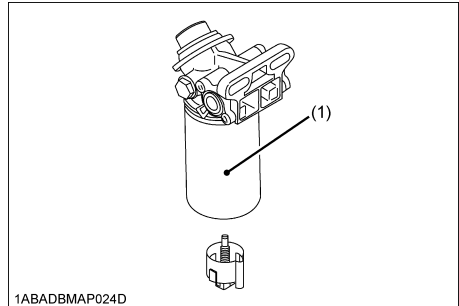

(1) Water separator filter

IMPORTANT :

- Bleed the air from the fuel system before getting the engine restarted.

CARRIAGE AND STORAGE

CARRIAGE



WARNING

To avoid personal injury or death:

- **Fix the engine securely not to fall during operation.**
- **Do not stand near or under the engine while carrying it.**
- **The engine is heavy. In handling it, be very alert not to get your hands and body caught in.**

1. Use carrier such as a crane when moving the engine to avoid bodily injury. Support the engine securely to avoid injury or damage.
2. When lifting the engine, put the hook securely to metal fittings attached to the engine. Use strong hook and fittings enough to hang the engine.

NOTE :

- In the above step, do not hook the lifting sling to the muffler.

STORAGE



WARNING

To avoid personal injury or death:

- **Do not clean the machine with engine running.**
- **To avoid the danger of exhaust fume poisoning, do not operate the engine in a closed building without proper ventilation.**
- **When storing the engine just after running, let the engine cool off.**

Before storing the engine for more than a few months, remove any dirt on the machine, and:

1. Drain the coolant in the radiator. Open the plug at the bottom of the radiator, and remove the pressure cap to drain coolant completely. Leave the plug open. Hang a note written "No coolant" on the pressure cap. Since water may freeze when the temperature drops below 0°C (32°F), it is very important that no water is left in the machine.

NOTE :

- When using antifreeze, it is not necessary to take step (1) above.
2. Remove dirty engine oil, fill with new oil and run the engine for about 5 minutes to let the oil penetrate to all the parts.
 3. Check all the bolts and nuts, and tighten if necessary.

4. Remove the battery from the engine, adjust the electrolyte level, and recharge it. Store the battery in a dry and dark place.
5. When the engine is not used for a long period of time, run it for about 5 minutes under no load every 2 to 3 months to keep it free from rust. If the engine is stored without any running, moisture in the air may condense into dew over the sliding parts of the engine, resulting in rust there.
6. If you forget to run the engine for longer than 5 to 6 months, apply enough engine oil to the valve guide and valve stem seal and make sure the valve works smoothly before starting the engine.
7. Store the engine in a flat place and remove the key from engine.
8. Do not store the engine in a place where has flammable materials such as dry grass or straw.
9. When covering the engine for storage, let engine and muffler cool off completely.
10. Operate the engine after checking and repairing damaged wirings or pipes, and clearing flammable materials carried by mouse.

[V3307-TIE4A]

11. Idle speed restriction on cold days
 - (1) When the engine coolant temperature is below 0°C (32°F), the engine idle speed becomes temporarily restricted. This is to protect the engine component parts, especially turbo charger.
 - (2) A specific time later, the restrictive system gets automatically released in stages.

TROUBLESHOOTING

If the engine does not function properly, use the following chart to identify and correct the cause.

■ When it is difficult to start the engine

Cause	Countermeasures
Fuel is thick and doesn't flow.	* Check the fuel tank, and remove water, dirt and other impurities. * Check the fuel filter cartridge and replace it if necessary.
Engine oil becomes thick in cold weather and engine cranks slow.	* Use oils of different viscosities, depending on ambient temperatures. (Use 10W-30 in winter season.)
Battery is discharged and the engine will not crank.	* Charge the battery.

■ When output is insufficient

Cause	Countermeasures
Fuel is insufficient.	* Refuel. * Check the fuel system. (Bleed the fuel system if necessary.)
Overheating of moving parts	* Consult your KUBOTA Dealer.
Air cleaner is dirty.	* Clean the element.
The output is limited because of a trouble.	* Check the engine warning lamp. (If a trouble occurs, it means that the ECU might be in the output limiting mode.)

■ When engine suddenly stops

Cause	Countermeasures
Lack of fuel	* Refuel. * Check the fuel system. (Bleed the fuel system if necessary.)
Overheating of moving parts	* Consult your KUBOTA Dealer.
Air cleaner is dirty.	* Clean the element.
Forced stop due to a trouble	* Check the engine warning lamp. (If a serious trouble occurs, it means that the ECU might have forced the engine to a stop.)

NOTE :

- If the cause of trouble can not be found, contact your KUBOTA Dealer.

IMPORTANT :

- If any of the sensors of common-rail engine malfunctions, the engine output and rotating speed drops during the run. In such case, contact your KUBOTA Dealer for repair.

■ When engine must be stopped immediately

Cause	Countermeasures
Engine revolution suddenly decreases or increases.	* Check the adjustments and the fuel system.
Unusual sound is heard.	* Check all moving parts carefully.
Oil lamp lights up during operation.	* Check the lubricating system. * Check to see if the engine bearing clearances are within factory specs. * Check the function of the relieve valve in the lubricating system. * Check pressure switch. * Check filter base gasket.
Engine warning lamp lights up.	* Consult your KUBOTA Dealer.

■ When engine overheats

Cause	Countermeasures
Engine oil insufficient	* Check oil level. Replenish oil as required.
Fan belt broken or elongated	* Change belt or adjust belt tension.
Coolant insufficient	* Replenish coolant.
Excessive concentration of antifreeze	* Add water only or change to coolant with the specified mixing ratio.
Radiator net or radiator fin clogged with dust	* Clean net or fin carefully.
Inside of radiator or coolant flow route corroded	* Clean or replace radiator and parts.
Fan or radiator or radiator cap defective	* Replace defective parts.
Thermostat defective	* Check thermostat and replace if necessary.
Temperature gauge or sensor defective	* Check temperature with thermometer and replace if necessary.
Overload running	* Reduce load.
Head gasket defective or coolant leakage	* Replace parts.

SPECIFICATIONS

Model	D1803-CR-TIE4
Type	Vertical, water-cooled, 4-cycle diesel engine
Number of cylinders	3
Bore and stroke mm (in.)	87 x 102.4 (3.43 x 4.04)
Total displacement L (cu.in.)	1.826 (111.43)
Combustion type	Direct injection type
Output: kW / min ⁻¹ (rpm) Gross Intermittent (PS / min ⁻¹ (rpm))	37.0 / 2700 (50.3 / 2700)
Max. torque / Rotating speed N-m / min ⁻¹ (rpm) (kg-m / min ⁻¹ (rpm))	150.5 / 1600 (15.3 / 1600)
Maximum bare speed min ⁻¹ (rpm)	2900
Minimum bare idling speed min ⁻¹ (rpm)	800
Order of firing	1-2-3
Direction of rotation	Counter-clockwise (viewed from flywheel side)
Compression ratio	16.0
Fuel	Diesel Fuel No.2-D ULS
Lubricant (API classification)	CJ-4 or CK-4
Dimensions (length x width x height) mm (in.)	758 x 513 x 744 (29.8 x 20.2 x 29.3)
Dry weight kg (lbs.)	195 (430)
Starting system	Cell starter
Starting motor	12V, 1.4 kW
Charging generator	12V, 480 W
Recommended battery capacity	12V, 88 Ah

NOTE :

- Specifications are subject to change without notice.

Model	V2403-CR-TIE4	V2607-CR-TIE4
Type	Vertical, water-cooled, 4-cycle diesel engine	
Number of cylinders	4	
Bore and stroke mm (in.)	87 x 102.4 (3.43 x 4.04)	87 x 110 (3.43 x 4.33)
Total displacement L (cu.in.)	2.434 (148.53)	2.615 (160.04)
Combustion type	Direct injection type	
Output: Gross Intermittent kW / min ⁻¹ (rpm) (PS / min ⁻¹ (rpm))	48.6 / 2700 (66.1 / 2700)	53.0 / 2700 (72.1 / 2700)
Max. torque / Rotating speed N-m / min ⁻¹ (rpm) (kg-m / min ⁻¹ (rpm))	198.5 / 1600 (20.2 / 1600)	225 / 1600 (22.9 / 1600)
Maximum bare speed min ⁻¹ (rpm)	2900	
Minimum bare idling speed min ⁻¹ (rpm)	800	
Order of firing	1-3-4-2	
Direction of rotation	Counter-clockwise (viewed from flywheel side)	
Compression ratio	16.0	
Fuel	Diesel Fuel No.2-D ULS	
Lubricant (API classification)	CJ-4 or CK-4	
Dimensions (length x width x height) mm (in.)	854 x 517 x 744 (33.6 x 20.4 x 29.3)	869 x 529 x 724 (34.2 x 20.8 x 28.5)
Dry weight kg (lbs.)	232 (511)	259 (571)
Starting system	Cell starter	
Starting motor	12V, 2.0 kW	12V, 2.5 kW
Charging generator	12V, 480 W	12V, 720 W
Recommended battery capacity	12V, 92 Ah	

NOTE :

- Specifications are subject to change without notice.

Model		V2403-CR-TE4-BG	V2403-CR-TIE4-BG
Type		Vertical, water-cooled, 4-cycle diesel engine	
Number of cylinders		4	
Bore and stroke	mm (in.)	87 x 102.4 (3.43 x 4.04)	
Total displacement	L (cu.in.)	2.434 (148.53)	
Combustion type		Direct injection type	
Output:	kW / min ⁻¹ (rpm)	36.5 / 1800	52.4 / 1800
Gross Intermittent	(PS / min ⁻¹ (rpm))	(49.6 / 1800)	(71.2 / 1800)
Maximum bare speed	min ⁻¹ (rpm)	1800	
Order of firing		1-3-4-2	
Direction of rotation		Counter-clockwise (viewed from flywheel side)	
Compression ratio		17.5	
Fuel		Diesel Fuel No.2-D ULS	
Lubricant (API classification)		CK-4	
Dimensions	mm (in.)	731.3 x 502.4 x 752.7	731.3 x 502.4 x 712.3
(length x width x height)		(28.8 x 19.8 x 29.6)	(28.8 x 19.8 x 28.0)
Dry weight	kg (lbs.)	226 (498)	
Starting system		Cell starter	
Starting motor		12V, 2.0 kW	
Charging generator		12V, 720 W	
Recommended battery capacity		12V, 92 Ah	

NOTE :

- Specifications are subject to change without notice.

Model	V3307-CR-TIE4	V3307-TIE4A	V3800-TIE4
Type	Vertical, water-cooled, 4-cycle diesel engine		
Number of cylinders	4		
Bore and stroke mm (in.)	94 x 120 (3.70 x 4.72)		100 x 120 (3.93 x 4.72)
Total displacement L (cu.in.)	3.331 (203.27)		3.769 (229.41)
Combustion type	Direct injection type		
Output: Gross Intermittent	kW / min ⁻¹ (rpm) (PS / min ⁻¹ (rpm))		55.4 / 2600 (75.3 / 2600)
Max. torque / Rotating speed N-m / min ⁻¹ (rpm) (kg-m / min ⁻¹ (rpm))	265 / 1500 (27.0 / 1500)		310 / 1500 (31.6 / 1500)
Maximum bare speed min ⁻¹ (rpm)	2800		
Minimum bare idling speed min ⁻¹ (rpm)	800		
Order of firing	1-3-4-2		
Direction of rotation	Counter-clockwise (viewed from flywheel side)		
Compression ratio	15.6		17.0
Fuel	Diesel Fuel No.2-D ULS		
Lubricant (API classification)	CJ-4 or CK-4		
Dimensions (length x width x height) mm (in.)	882 x 561 x 744 (34.7 x 22.1 x 29.3)	882 x 561 x 749 (34.7 x 22.1 x 29.5)	835 x 580 x 835 (32.9 x 22.8 x 32.9)
Dry weight kg (lbs.)	295 (650)		324 (714)
Starting system	Cell starter		
Starting motor	12V, 3.0 kW		
Charging generator	12V, 720 W		12V, 540 W
Recommended battery capacity	12V, 108 Ah		12V, 136 AH

NOTE :

- Specifications are subject to change without notice.