

PROBLEM


The potentiometer knob on the O₂ Quickstick spins freely and does not turn the O₂ Quickstick on, off, nor can the analyzer be calibrated.

POSSIBLE SOLUTION

Oftentimes, users can pull off the potentiator/knob and spread the metal potentiometer knob split shaft gently with a small flathead screwdriver to increase tension on the knob.



Knob does not turn on/off/calibrate the Quickstick.

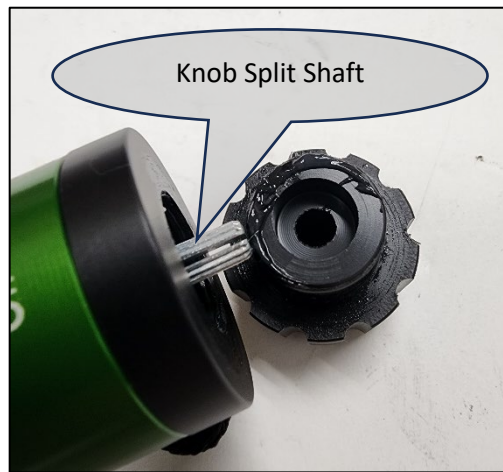

Remove knob to expose knob split shaft.



Use small screwdriver to gently spread knob split shaft.



Replace knob. Increased split shaft tension should make knob work. If not, please contact ron@nuvair.com for assistance.